

SKYDECK Panel Slab Formwork

Instructions for Assembly and Use – Standard Configuration – Issue 11 | 2017



Content

	Main components	1
	Кеу	2
1	Presentational reference	2
mure	Target groups	3
	Additional technical documentation	3
	Intended use	4
	Cleaning and maintenance instructions	5
	Instructions on use	5
Safe	ty instructions	
	Cross-system	6
	System-specific	7
	Storage and transportation	7
Stan	dard configuration	
A1	Storage and transportation	8
A2	System components	11
A3	System dimensions	14
	Notes regarding static calculations	14
	Internal forces and rigidity	15
	Load combinations	15
A4	Shuttering	1/
	Starting bay	17
	Iransverse bay	19
	Longitudinal bay	20
	Standard bay	21
۸ Б	Componentions	23
AU	System components	24
	Edge Beam SBT-2 150 SBT-275	24
	Filler Timber SPH	24
	End Support SSL	24
	Combihead SCK	25
	Triangular Frame SDR 150/75, 75/75	28
	Length compensations	28
	Transverse compensation	31
A6	Shuttering around columns	34
	1 recessed panel	34
	2 recessed panels	35
	3 recessed panels	36
	Recessed main beams	37
	Shifting the main beam axis	37
A7	Horizontal bracing	38
	Transfer of horizontal loads into the	
	columns of the building	38
	General	39
	Bracing of the inner bay	39
	iranster of norizontal loads from a	40
<u>۸</u> 0	Casting segment	40
АЯ	Cantilevers, guardrails	42
	provent tipping	10
	Guardrails with Handrail Unit SD	42
	SKYDECK Guardrail Holdor SCH and	43
	Guardrail Post SGP	41

Δ9	SKYDECK Platforms	46		
70	Corpor table (Area I)	40		
		-+7 51		
		51		
		52		
		52		
	Infill areas	52		
	Platform Installation	53		
	Striking	54		
A 1 O	VVorking and safety scattoid	55		
AIU		56		
	- System with Prophead SSK	56		
A 1 1	- System with Drophead SFK	58		
AH	Inclined slaps	60		
	Bracing with rension Sieeve SAO	<u> </u>		
	and Chain 3.0 KN Brasing with Tansian Unit SD	60		
A10	Striking	62		
A12	Stilking Site record	64		
AI3	Site record	04		
Ποςί	an tables			
	Horizontal loads with Slab Props PEP	65		
A15	Inclined slabs	66		
7 (10	Maximum permissible slab inclination with	00		
	Tension Sleeve SAO and Chain 3.0 kN	66		
	Tension Unit SD - bracing angle	66		
	Tension force of Tension Unit SD and			
	prop loads			
	– System with Drophead SFK	67		
	– System with Prophead SSK	70		
A16	SKYDECK standard configuration	73		
	Prop loads			
	– System with Drophead SFK	73		
	– System with Prophead SSK	74		
	– Panel system	75		
	Striking guide values	75		
A17	Filler plates, forming around columns	76		
A18	Slab Props	77		
	– PEP 20	77		
	– PEP 20 with Base MP 50	78		
	– PEP 30	79		
	– PEP 30 with Base MP 50	80		
	– PEP Ergo B	81		
	– PEP Ergo D	82		
	– PEP Ergo E	84		
	– MULTIPROP 250, 350, 480, 625	85		
	– MULTIPROP 250, 350, 480, 625			
	with Base MP 50	86		
Com	ponents			
	Components	88		

PERI

Overview

PERI

Main components



Overview



Key

Pictogram Definition		Dimension specifications				
	Safety instructions	Other measurement units, e.g. m, are shown in the illustrations.				
-	Note	 Conventions Instructions are numbered with: 1 2 3 				
$\mathbf{\dot{v}}$	Load-bearing point	 The result of an instruction is shown by: → 				
C	Visual check	 Position numbers are clearly provided for the individual components and are given in the drawing, e.g. 1, in the text in brackets, for example (1). Multiple position numbers, i.e. alternative components, are represented 				
<u>`ف</u>	Tip					
-in (1	Personal protective equipment to prevent falling from a height (PPE)	with a slash, e.g. 1 / 2 .				
\otimes	Misapplication					
✓	Correct application	 Arrows → Arrow representing an action ⇒ Arrow representing a reaction of an action* → Forces 				
		* if not identical to the action arrow.				

Presentational reference

The illustration on the front cover of these instructions is understood to be a system representation only. The assembly steps presented in these Instructions for Assembly and Use are shown in the form of examples with only one component size. They are valid accordingly for all component sizes contained in the standard configuration.

For a better understanding, detailed illustrations are partly incomplete. The safety installations which have possibly not been included in these detailed drawings must nevertheless still be available.

Introduction

Target groups

Contractors

These Instructions for Assembly and Use are designed for contractors who use the formwork systems for

- assembling, modifying and dismantling operations, or
- use them, e.g. for concreting, or
- allow them to be used for other work operations, e.g. carpentry or electrical work.

Construction site coordinator

- The Safety and Health Coordinator*
- is appointed by the client,
- must identify potential hazards during the planning phase,
- determines measures that provide protection against risks,
- creates a safety and health plan,
- coordinates the protective measures for the contractor and site personnel so that they do not endanger each other,
- monitors compliance with the protective measures.

Competent persons

Due to the specialist knowledge gained from professional training, work experience and recent professional activity, the competent person has a reliable understanding of safety-related issues and can correctly carry out inspections. Depending on the complexity of the test to be undertaken, e.g. scope of testing, type of testing or the use of a certain measuring device, a range of specialist knowledge is necessary.

Qualified persons

Formwork systems may only be assembled, modified or dismantled by personnel who are suitably qualified to do so. For the work to be carried out, the qualified persons must have received instructions** covering at least the following points:

- Explanation of the plan for the assembly, modification or dismantling of the formwork in an understandable form and language.
- Description of the measures for assembling, modifying or dismantling the formwork.
- Designation of the preventive measures to avoid the risk of persons and objects falling.

- Designation of the safety precautions in the event of changing weather conditions which could adversely affect the safety of the formwork system as well as the persons concerned.
- Details regarding the permissible loads.
- Description of any other risks that are associated with the assembly, modification or dismantling procedures.

\rightarrow

- In other countries, ensure that the relevant national guidelines and regulations in the respective current version are complied with!
- If no country-specific regulations are available, it is recommended to proceed according to German rules and regulations.
- A competent person must be present on site during formwork operations.

- Valid in Germany: Regulations for Occupational Health and Safety on Construction Sites 30 (RAB 30)
- ** Instructions are given by the contractor himself or a competent person selected by him.

Additional technical documentation

- Poster: SKYDECK
- MULTIPROP Slab Props: Instructions for Assembly and Use
- PEP Ergo Slab Props: Instructions for Assembly and Use
- Instructions for Use:
 - Pallet Lifting Truck
 - Pallets and Stacking Devices
 - Stripping Cart ASW 465
 - Stripping Cart Alu
 - Transportation Fork SKYDECK SUG
- Technical Data Sheet for Anchor Bolt PERI 14/20 x 130
- PERI Design Tables Formwork and Shoring
- Brochures:
 - SKYDECK
 - SKYDECK Beam Waler SD

Introduction

PERI

Intended use

Product description

PERI products have been designed for exclusive use in the industrial and commercial sectors by qualified users only.

PERI SKYDECK is a panel slab formwork system used for constructing slab thicknesses up to 109 cm. Depending on the slab thickness and concrete strength, the SKYDECK Drophead allows striking to take place after only 1 day: see table containing minimum concrete strength and striking guide values.

The SKYDECK Platform is a prefabricated, folding scaffold platform for use as working and safety scaffold according to DIN 4420 Part 1. Immediately after concreting, it is available as safety scaffold to provide safe and secure working conditions on rising structures.

Classification is effected in Scaffold Group 2 (useful load per surface 150 kg/m²). It is required for concreting floor slabs in skeleton construction (high-rise buildings) and for securing the open edges of the SKYDECK Slab Formwork System. A 1.30 m wide platform decking with guardrails provides safe working conditions on the slab edges.

Features

The panels and main beams are made of aluminium which means they are very light.

Accessories for infill areas, shuttering around columns and the slab edges are also available.

Due to early striking, the panels and main beams can be used for the next concreting cycle.

Only the props with dropheads and the cover strips remain in position until the full concrete strength has been reached. On-site material requirements are therefore clearly reduced.

For supporting the SKYDECK panels, PERI MULTIPROPs or PEP Slab Props can be used.

The SKYDECK Platform consists of:

- 39 mm thick plywood decking fixed to a supporting frame,
- a folding handrail unit that is screwed to the supporting frame as a framed construction, and held by a securing lever when opened up.

The platform can be used on the slab edge as well as in the corner table area. Three lengths are available for the various applications.

SDB 150	L = 1.50 m
SDB 225	L = 2.25 m
SDB 300	L = 3.00 m

The SDB 225 Platform can also be used for side cantilevers of 75 cm to the right or left of the main beam.

The platform is assembled with the crane from the outside of the building. It is set down on the cantilevered main beams and automatically locks in position.

All steel parts are galvanized while all safety components are red powder-coated.

Technical data System dimensions With Drophead SFK, Main Beam SLT 225

- 230 x 150 cm, slab thickness max. 43 cm, as standard case presented in the Instructions for Assembly and Use
- 230 x 75 cm, slab thickness max. 90 cm
- 115 x 75 cm, slab thickness max. 109 cm with centre support

With Drophead SFK, Main Beam SLT 150

- 155 x 150 cm, slab thickness max. 52 cm
- 155 x 75 cm, slab thickness max. 109 cm

With Prophead SSK, Main Beam SLT 225

- 225 x 150 cm, slab thickness max. 43 cm
- 225 x 75 cm, slab thickness max. 90 cm
- 112.5 x 75 cm, slab thickness max. 109 cm with centre support

With Prophead SSK, Main Beam SLT 150

150 x 150 cm, slab thickness max. 55 cm 150 x 75 cm, slab thickness max. 109 cm

For permissible slab thicknesses and available prop loads: see PERI Design Tables.

Introduction

Cleaning and maintenance instructions

In order to maintain the value and operational readiness of the formwork materials over the long term, clean the panels after each use.

Some repair work may also be inevitable due to the tough working conditions. The following points should help to keep cleaning and maintenance costs as low as possible.

Spray the formwork on both sides with concrete release agent before each use; this allows easier and faster cleaning of the formwork. Spray the concrete release agent very thinly and evenly!

Spray the rear side of the formwork with water immediately after concreting; this avoids any time-consuming and costly cleaning operations.

When used continuously, spray the panel formlining with concrete release agent immediately after striking; then clean by means of a scraper, brush or rubber lip scraper.

Important: do not clean formlining made of plywood with high-pressure equipment; this could result in the formlining being damaged. Fix box-outs and mounting parts with double-headed nails; as a result, the nails can easily be removed later, and damage to the formlining is largely avoided.

Close all unused tie holes with plugs; this eliminates any subsequent cleaning or repair work.

Tie holes accidentally blocked with concrete are freed by means of a steel pin from the formlining side.

When placing bundles of reinforcement bars or other heavy objects on horizontally-stored formwork elements, suitable support, e.g. square timbers, is to be used; as a result, impressions and damage to the formlining are largely avoided.

Internal concrete vibrators should be fitted with rubber caps if possible; as a result, any damage to the formlining is reduced if the vibrator is accidently "inserted" between the reinforcement and formlining. Never clean powder-coated components, e.g. elements and accessories, with a steel brush or hard metal scraper; this ensures that the powder-coating remains intact.

Use spacers for reinforcement with large-sized supports or extensive areas of support; this largely avoids impressions being formed in the formlining when under load.

Mechanical components, e.g. spindles or gear mechanisms, must be cleaned of dirt or concrete residue before and after use, and then greased with a suitable lubricant.

Provide suitable support for the components during cleaning so that no unintentional change in their position is possible.

Do not clean components suspended on a crane.

Instructions on use

The use in a way not intended according to the Instructions for Assembly and Use, or any use deviating from the standard configuration or the intended use represents a misapplication with a potential safety risk, e.g. risk of falling.

Only PERI original components may be used. The use of other products and spare parts is not allowed.

Changes to PERI components are not permitted.

Safety instructions



Cross-system

General

The contractor must ensure that the Instructions for Assembly and Use supplied by PERI are available at all times and understood by the site personnel.

These Instructions for Assembly and Use can be used as the basis for creating a risk assessment. The risk assessment is compiled by the contractor. These Instructions for Assembly and Use do not replace the risk assessment!

Always take into consideration and comply with the safety instructions and permissible loads.

For the application and inspection of PERI products, the current safety regulations and guidelines valid in the respective countries must be observed.

Materials and working areas are to be inspected on a regular basis, especially before each use and assembly, for:

- signs of damage,
- stability and
- function.

Damaged components must be exchanged immediately on site and may no longer be used.

Safety components are to be removed only when they are no longer required.

Components provided by the contractor must conform with the characteristics required in these Instructions for Assembly and Use as well as with all valid construction guidelines and standards. Unless otherwise indicated, this applies in particular:

- Timber components: Strength Class C24 for Solid Wood according to EN 338.
- Scaffold tubes: galvanised steel tubes with minimum dimensions of Ø 48.3 x 3.2 mm according to EN 12811-1:2003 4.2.1.2.
- Scaffold tube couplings according to EN 74.

Deviations from the standard configuration are only permitted after a further risk assessment has been carried out by the contractor.On the basis of this risk assessment, appropriate measures for working and operational safety as well as stability are to be determined. Corresponding proof of stability can be provided by PERI on request if the risk assessment and resulting measures to be implemented are made available.

Before and after exceptional occurrences that may have an adverse effect regarding the safety of the formwork system, the contractor must immediately

- create another risk assessment, with appropriate measures for ensuring the stability of the formwork system being carried out based on the results,
- and arrange for an extraordinary inspection by a competent person. The aim of this inspection is to identify and rectify any damage in good time in order to guarantee the safe use of the formwork system.

Exceptional occurrences can include:

- accidents,
- longer periods of non-use,
- natural events, e.g. heavy rainfall, icing, heavy snowfall, storms or earthquakes.

Assembly, modification and dismantling work

Assembly, modification or dismantling of formwork systems may only be carried out by qualified persons and under the supervision of a competent person. The qualified personnel must have received appropriate training for the work to be carried out with regard to specific risks and dangers. On the basis of the risk assessment and Instructions for Assembly and Use, the contractor must create installation instructions in order to ensure safe assembly, modification and dismantling of the formwork system.

The contractor must ensure that the personal protective equipment required for the assembly, modification or dismantling of the system, e.g.

- safety helmet,
- safety shoes,
- safety gloves,
- safety glasses,

is available and used as intended.

If personal protective equipment against falling (PPE) is required or specified in local regulations, the contractor must determine appropriate attachment points on the basis of the risk assessment.

The personal protective equipment against falling to be used is determined by the contractor.

The contractor must

- provide safe working areas for site personnel which are to be reached through the provision of safe access ways. Areas of risk must be cordoned off and clearly marked.
- ensure the stability during all stages of construction, in particular during assembly, modification and dismantling of the formwork.
- ensure and prove that all loads can be safely transferred.

Utilization

Every contractor who uses or allows formwork systems or sections of the formwork to be used, has the responsibility for ensuring that the equipment is in good condition.

If the formwork system is used successively or at the same time by several contractors, the health and safety coordinator must point out any possible mutual hazards and all work must be then coordinated.

Safety instructions

System-specific

Retract components only when the concrete has sufficiently hardened and the person in charge has given the goahead for striking to take place.

Anchoring is to take place only if the anchorage has sufficient concrete strength.

In order to avoid an overloading of the integrated temporary props, the load-bearing capacity of the slabs, plates and beams which have already been completed must be activated. For this, a free deflection possibility of these components is required. This takes place by releasing and re-installing all existing temporary props, and is also required for formwork systems where the prop head is an integral part of the slab formwork.

The load-distributing support used, such as planking, must match the respective base. If several layers are required, planks are to be arranged crosswise.

During striking, do not tear off the formwork panels with the crane.

The existing prop loads (see Tables) must be safely transferred by means of sufficiently load-bearing slab props or shoring systems.

SKYDECK Platforms are classified in Load Class 2 (permissible load 1.5 kN/m² - 150 kg/m²). They are available as working scaffold. The horizontal fixed position of the slab formwork must be guaranteed. This is given with circumferential walls and pre-concreted beam walers. Otherwise, the transfer of the horizontal loads has to be guaranteed by means of other measures supplied by the contractor, e.g. bracing.

Load assumptions for horizontal loads in accordance with DIN EN 12812.

When storing heavy items on the formwork, the load-bearing capacity must be taken into consideration.

Cantilevers may only be accessed after bracing has been mounted.

With all-round enclosed structure geometries, panels are to be fixed to the main beams by means of two Panel Clips SPK (21) each for wind speeds between 0.033 kN/m² (26 km/h) and dynamic pressure 0.061 kN/m² (36 km/h).

For unfavourable structure geometries or larger wind speeds, additional securing measures are to be implemented, e.g.:

- ballast,
- bracing,
- dismantling the formwork etc.

Storage and transportation

Store and transport components ensuring that no unintentional change in their position is possible. Detach lifting accessories and slings from the lowered components only if they are in a stable position and no unintentional change is possible.

Do not drop the components.

Use PERI lifting accessories and slings as well as only those load-bearing points provided on the component.

During the moving procedure

- ensure that components are picked up and set down so that unintentional falling over, falling apart, sliding, falling down or rolling is avoided.
- no persons are allowed to remain under the suspended load.

Always guide pre-assembled scaffolding bays, scaffolding units or scaffolding sections with ropes when moving them by crane.

The access areas on the construction site must be free of obstacles and tripping hazards as well as being slip-resistant.

For transportation, the surface must have sufficient load-bearing capacity.

Use original PERI storage and transport systems, e.g. crate pallets, pallets or stacking devices.

A1 Storage and transportation

PFRI

- Follow Instructions for Use for PERI Pallets and Stacking Devices!
- Manually-created transport units must be correctly stacked and secured!
- Pallets and stacked components are to be protected against the effects of the weather, e.g. secure packed components against lifting using tension straps !
- Always attach the 4-sling lifting gear using the four load-bearing points!

Transportation

PERI pallets and stacking devices are suitable for lifting by crane or forklift. They can also be moved with the PERI Pallet Lifting Trolley.

All pallets and stacking devices can be lifted using both the longitudinal and front sides.

The illustrations show examples.

Stacked with Panels SDP 150 x 75

Pallet SD: 48 pieces (Fig. A1.01 + A1.02) Pallet SD: 14 pieces (Fig. A1.04 + A1.05) The Pallet SD can also be used for stor-

ing other SKYDECK components, e.g. Main Beam SLT. (Fig. A1.03)

Stacking:

2 loaded pallets, one on top of the other.





Lashing straps are manufactured according to DIN EN 12195-2, and are to be regularly checked in accordance with this standard.







A1 Storage and transportation

PERI

Pallet: Handrail Unit SD 150 Pallet: Handrail Unit SD 75

Number of handrail units per pallet

Handrail Unit SD 150: 10 pieces (Fig. A1.06) Handrail Unit SD 75: 10 pieces (Fig. A1.07)

Stacking:

2 loaded pallets, one on top of the other.

Loading sequence

- 1. Open locking mechanism on the pallet frame.
- 2. Slide in one handrail unit and close locking mechanism.
- 3. Slide in additional handrail units. Handrail units lock automatically through the red bars.
- 4. Secure handrail units on the front side against sliding out. Insert retaining bar and lock in place.









Fig. A1.08

A1 Storage and transportation

SKYDECK platforms

The platforms can be stored in stacks of up to 5 elements.

Weights:	
SDB 300	184 kg / piece
SDB 225	155 kg / piece
SDB 150	108 kg / piece

Stacks of platforms can be lifted with a fork-lift truck using the long side. (Fig. A1.09) The stack can be moved with the crane

by means of the external crane eyes. (Fig. A1.10)



Ensure the platforms are secured on lorries evenly but not too tightly.

Fig. A1.09



×Ce

A2 System components

6

27

Propheads

Drophead SFK (1) Prophead SSK (6) Combihead SCK (7) Transition Head SDSK (26) Transition Head SDFK (27)

The Drophead SFK can be used for all standard situations and allows the removal of main beams and panels while simultaneously supporting the slab.

The Prophead SSK must be used in all starting bays. Prophead SSK and Combihead SCK are used, e.g. for compensations.

Prophead SDSK and Prophead SDFK are used when changing direction.



- Main Beam SLT 225
- Main Beam SLT 150

For the exclusive use with the SKYDECK Platform SDB, a main beam which can accommodate the Platform SDB is available.

It may only be used for the described purposes.

- Main Beam SLT 375

Panel SDP

The Panel SDP is available with the following dimensions:

- Panel SDP 150x75
- Panel SDP 150x50
- Panel SDP 150x37.5
- Panel SDP 75x75
- Panel SDP 75x50
- Panel SDP 75x37.5

Cover Strip SAL

The Cover Strip SAL is available with the following dimensions:

- Cover Strip SAL 150
- Cover Strip SAL 75
- Cover Strip SAL 50
- Cover Strip SAL 37.5



26

Fig. A2.04

Fig. A2.01

A2 System components

PERI

26

Slab props

Dropheads SFK, Propheads SSK, SDFK or Combiheads SCK fit on props with a hole diameter of Ø 38 – 40 mm. For hole diameters > 40 mm, the heads must be bolted diagonally using 2 Bolts DIN EN ISO 4016 M12 x 40-4.6 galv., Mu, item no. 035440. (Fig. A2.01)



Transition Heads SDSK (26) must always be fitted, see A10 Changing direction

->

Prop loads over 33.3 kN:

Drophead is bolted on for use with PEP Slab Props using 2 Bolts DIN EN ISO 4016 M12 x 40-4.6 galv., Mu.

Preparing the Drophead

- 1. Push drophead wedge (1.1) and Drophead (1.2) upwards as far as possible. (Fig. A2.06)
- 2. Insert drophead wedge.
- 3. Secure with hammer blow = shuttering position.
 → Drophead SFK is ready for use.

Brophoud of Kilo roudy for de

Preparing the slab props

- Adjust the extension lengths of the props. Clear room height minus dimension x. (Fig. A2.07).
 Take into consideration the different overall heights of the main beams: Main Beam SLT 225 = 24 cm / Main Beam SLT 150 = 19 cm
- Insert the prepared Drophead (1), Prophead (6) or Combihead (7) into the prop. The self-locking coupling is secured automatically. (Fig. A2.05)
 → The prop is ready for use.



Starting bay Main Beam SLT 225



n n

4

Ш



36

 $^{\parallel}$

1





End bay Panel SDP

ha a alla a ana a alla a 7





SKYDECK Panel Slab Formwork Instructions for Assembly and Use – Standard Configuration

A2 System components



A3 System dimensions



Notes regarding static calculations

This design information is used for the design and planning of the SKYDECK Slab Formwork System. It covers standard configurations for slab thicknesses from 0.14 m to 1.09 m.

Comparison of the design methods





Method of proof



Кеу

- R_k = characteristic resistance
- R_d = design value of the resistance
- $F_k = F_{actual.} = actual or characteristic action$
- E_d = design value of the action
- $F_{ult.} = R_k$ = characteristic resistance (e.g. breaking load)
- F_{perm.} = Permissible load-bearing capacity

Design method used in this design information

This design information is based on the design concept with the absolute safety factor.

The tables of the prop loads include the permissible load-bearing capacities ${\sf F}_{{\sf perm}.}$

After multiplication using $\gamma_F = 1.5$, the maximum load-bearing capacity can also be converted into a design value of the resistance R_d for the method with partial safety factors.

The old design concept with the absolute safety factor (see PERI Design Tables)



Method of proof



- γ_M = partial safety factor for the material (steel \approx 1.1 / concrete \approx 1.5)
- γ_F = partial safety factor for the load (permanent = 1.35 / changeable = 1.5)
- $\gamma_{tot.}$ = absolute safety factor $\approx \gamma_M \cdot \gamma_F$ (steel ≈ 1.65 / concrete ≈ 2.25)

A3 System dimensions

Internal forces and rigidity

Permissible internal forces and rigidity for the design with single-span girders

ltem no.	Designation	perm. M [kNm]	perm. Q [kN]	El [kNm²]
061100	Main Beam SLT 225	16.0	22.0	1198
061160	Main Beam SLT 375	12.6	22.0	1198
061110	Main Beam SLT 150	11.3	18.0	656
061045	Edge Beam SRT-2 150	2.9	8.0	91
061045	Edge Beam SRT-2 turned	2.1	8.0	31
061047	Edge Beam SRT-2 / 27	3.0	8.0	88
061047	Edge Beam SRT-2 / 27 turned	2.1	8.0	28
061049	Filler Timber SPH 150	0.7	2.4	32
061049	Filler Timber SPH turned	0.4	1.7	7
061050	Filler Timber SPH / 27	0.6	2.4	29
061050	Filler Timber SPH / 27 turned	0.3	1.3	7

Table A3.01

Load combinations

Vertical loads Concreting (according to DIN EN 12812)				
SKYDECK dead load	Q₁	=	0.20 kN/m ²	
Concrete load	Q_{2h}	=	24.5 kN/m ³ x d [m]	
Equivalent load concreting	Q ₄	=	0.10 x Q _{2,b} 0.75 kN/m ² < Q4 < 1.75 kN/m ²	
Equivalent load working conditions	Q _{2,p}	=	0.75 kN/m ²	
Total load	Q	=	$Q_1 + Q_{2,b} + Q_{2,p} + Q_4$	
SKYDECK Platforms SDB (according to DIN EN 12811)				
Load Class 2	$q_1 \\ F_1$	=	1.50 kN/m² 1.50 kN (500 x 500 mm²)	
Horizontal loads Horizontal load from working operation Horizontal load from the tilting position	IS	=	1% of the vertical load (DIN EN 12812; 8.2.2.2) 1% of the vertical load (DIN EN 12812; 9.3.4.2)	
Wind loads	a		0.20 LNUm2 (DIN EN 12011 1.6.2.7.4.2)	
Maximum wind speed dynamic	q _{W,A} =		0.20 KN/III- (DIN EN 12811-1, 0.2.7.4.2)	
pressure	q _{W,m}	_{lax} =	0.60 kN/m²	
Height of the substitute area for equipr LF working wind	ment h _{W,A}	and mate	erials on the scaffold level 0.40 m (DIN EN 12811-1, 6.2.7.4.2)	
Height of the substitute area for equipr LF maximum wind speed	ment h _{W,m}	and mate _{lax} =	erials on the scaffold level 0.20 m (DIN EN 12811-1, 6.2.7.4.1)	
Wind on the side protection: Working wind speed on SKYDECK Guardrail Holder SGH and Guardrail Post SGP $q_{W,A,S} = 0.183 \text{ kN/m}$				
Maximum wind speed with SKYDECK Guardrail Holder SGH and Guardrail Post SGP $q_{W,max,S} = 0.550 \text{ kN/m}$				

SKYDECK Panel Slab Formwork Instructions for Assembly and Use – Standard Configuration PERI

A3 System dimensions

Overview of the required frames: MRK with the use of MULTIPROP Towers PRK with the use of PEP Props

Frame	MRK Item no.	PRK Item no.	SKYDECK system
62.5 Steel	028390	111811	 Inset beam at beginning of wall with 75 cm panel span. Inset prop at beginning of wall with Combihead.
75 Steel	028400	111812	– Panel span 75 cm.
137.5 Steel	028380	111813	 Inset beam at beginning of wall with 150 cm panel span.
150 Steel	028350	111814	– Panel span 150 cm.
201.5 Alu	028460	111815	 Inset prop at beginning of wall under SLT 225 with Prophead or Combihead.
225 Alu	028360	111816	 SLT 225 on Prophead or Combihead. Use of Cantilever Beam SLT 375 on Prophead/Combihead or corner tables.
230 Alu	028470	111817	– SLT 225 on Dropheads.

Table A3.02

235

2015

2250



Fig. A3.01

Fig. A3.02

Starting bay



Shuttering is carried out using a safe mobile scaffold!

Position props and main beams

- 1. Position prop with Prophead (6) in one corner of the room (spacing: see Fig. A4.05).
- 2. Secure with tripod to prevent it from falling over.
- 3. Position prop with Drophead (1). Distance from the wall 2.275 m. (Fig. A4.01)
- 4. Secure with tripod to prevent it from falling over.
- 5. Insert Main Beam SLT 225 (2) into the beam support of the Prophead and Drophead. The main beam connection (2.1) must be mounted in the middle of the beam support (1.2) of the SKYDECK heads. (Fig. A4.02a / A4.02b / A4.02c)
- 6. Secure Main Beam SLT 225 (2) with Wall Holder SWH-2 (8).
- 7. Position second pair of props at a distance of 1.50 m from the wall.
- 8. Insert Main Beam SLT 225 (2) in the beam support. (Fig. A4.02a / A4.02b / A4.02c / A4.04)

0

Does the main beam connection (2.1) enclose the beam support (1.2)? (Fig. A4.02c)



Set up drophead props on the wall so that the drophead wedge can be removed during striking. The Main Beam SLT is always positioned parallel to the long wall side. Always check the rectangularity of the first bay.

Components:

- Drophead SFK 1
- Main Beam SLT 2
- 6 Prophead SSK
- Wall Holder SWH-2 8



Fig. A4.01



Fig. A4.02a





Fig. A4.02b

Fig. A4.02c

2010191910101919

MELSKYDECK



Fig. A4.03



Fig. A4.04



Α

Fig. A4.05

Section A-A



Fig. A4.05a



Insert panels

- 1. Install panels (3) on the Main Beam SLT 225 (2).
- → The rack of the Main Beam SLT fixes the panel in position.
- Secure wall-side panel and Main Beam SLT with Wall Holder SWH-2 (8). (Fig. A4.06)
- 3. Install two additional panels. (Fig. A4.07)
 - → The starting bay is complete. (Fig. A4.08)



Spray the edge of the panel with release agent before shuttering.



Fig. A4.06

Fig. A4.07



Wall Holder SWH-2



The formwork surface area may only be accessed or loaded when Wall Holders SWH-2 have been installed!

The Wall Holder SWH-2 (8) is used to hold the slab formwork in a horizontal position during the assembly. It is installed in longitudinal and transverse directions, and can fix the main beam as well as the panel. The Wall Holder SWH-2 (8) is mounted in every second bay.

Assembly

- 1. Insert tie rod with wingnut pivot plate through the available tie hole.
- 2. Place Main Beam SLT into the Wall Holder SWH-2 or push into the edge of the panel.
- 3. Tighten Wall Holder SWH-2 with wingnut Pivot plate on the wall.
- 4. Remove tripods. (Fig. A4.08)
- \rightarrow The wall holder is assembled.



Fig. A4.08

Instructions for Assembly and Use - Standard Configuration

Transverse bay

- 1. Position prop with Prophead SSK (6). Spacing 1.50 m.
- 2. Secure with tripod.
- 3. Position prop with Drophead SFK (1). Spacing 2.275 m.
- 4. Insert Main Beam SLT 225 (2) into the beam support of the Prophead and Drophead. (Fig. A4.09)
- 5. Secure with tripod.
- 6. Insert panels (3). (Fig. A4.10) → The transverse bay is complete. (Fig. A4.11)



Shuttering is carried out using a safe mobile scaffold!



Working in a transverse direction is recommended.

Use tripods again in the next bay.



Fig. A4.09



Fig. A4.10

Components:

- 1 Drophead SFK
- 2 Main Beam SLT
- 3 Panel SDP
- 6 Prophead SSK
- 8 Wall Holder SWH-2





PERI

Longitudinal bay



Based on the risk assessment, the contractor must decide whether forming takes place from above or below!

- 1. Attach Main Beam SLT 225 (2) to the Drophead.
- Connect prop with Drophead in the main beam. (Fig. A4.12)
 Place prop in a vertical position.
- (Fig. A4.12a)
- 4. Secure with tripod.
- 5. Proceed likewise with the second main beam and prop.
- 6. Insert panels (3). (Fig. A4.13)
- 7. Remove tripod and use again in the next bay.
 - → The longitudinal bay is now complete. (Fig. A4.14)

The Wall Holder SWH-2 (8) is mount-

 When shuttering from below, use a safe and secure mobile scaffold;

install panels overhead.

ed in every second bay.

Risk of falling!











Optimum angle for mounting the Main Beam SLT up to α 45°.

The main beam is correctly fitted if the corner of the recess hangs under the prop without obstruction.





Do not install Panels from on top of the deck being assembled.

The SKYDECK Guardrail Holder must be installed during the shuttering process of the panels. For details, see Section A8.

Components:

- 2 Main Beam SLT
- **3** Panel SDP
- 4 Cover Strip SAL
- 5 Pallet SD
- 8 Wall Holder SWH-2

Fig. A4.14

Fig. A4.13

SKYDECK Panel Slab Formwork Instructions for Assembly and Use – Standard Configuration

Standard bay

Due to the recurring assembly sequence, the procedure is always the same.



With all-round enclosed structure geometries, panels are to be fixed by means of two Panel Clips SPK (21) each time to the main beams for wind speeds between 0.033 kN/m² (26 km/h) and dynamic pressure 0.061 kN/m² (36 km/h). For unfavourable structure geometries or larger wind speeds, additional securing measures are to be implemented, e.g.:

- ballast
- bracing (Fig. A4.16)
- dismantling the formwork etc.
- 1. Attach Main Beam SLT 225 (2) to the Drophead.
- 2. Connect prop with Drophead SFK in the lifted main beam. (Fig. A4.15)
- 3. Place prop in a vertical position.
- 4. Insert panels (3).
 - → The standard bay is now complete.



Fig. A4.15



Fig. A4.16



The Prophead SSK is not a substitute for the Drophead. Without the Drophead, the Cover Strip (4) has no supporting effect.

Fig. A4.17

Shuttering the casting segment

Set down Pallet SD (5) with panels (3) onto the forming area. Place panels in the main beams. Make empty pallets available in preparation for the striking process. (Fig. A4.18)

- 1. Shutter the standard bays until there is no more space for the Main Beam SLT 225 or Compensation Beam SLT 150.
- 2. Form the infill areas. See A5.
- 3. Continually insert Cover Strip SAL (4). (Fig. A4.19)
- 4. Thinly spray the forming area with a release agent also from below if used for the first time.

Risk of slipping!

The forming area becomes slippery through the use of release agents!

- Be extremely careful when accessing forming areas after spraying!
- Weather conditions are to be taken into account!

→

 Only begin with the reinforcement work when the Cover Strips have been installed!

<u>`</u>

For the tightness of the panel joints, e.g. for casting segments/setting of stopends, push the panels tightly together and secure on the last main beam with Panel Wedge Clips SPKK (20).

(Fig. A4.20 - Fig. A4.22)

Application possibilities

1. Panel joint in the middle of main beam



Fig. A4.20



Fig. A4.18





Panel Wedge Clip SPKK

The panel wedge clip is used to connect 2 panels with one main beam.

2. Overlapping panel



Fig. A4.21

Side view



Fig. A4.22

PERI

PERI

Shuttering with Prophead



Risk of injury!

If slab props with mounted Propheads fall over or are otherwise used improperly, this may result in damage to the Prophead.

As a result, Propheads could fail during further use and cause serious injuries to site personnel.

- Dismantle Propheads after incorrect use and check for any signs of damage, e.g. cracked weld seams!
- Damaged components must not be used!



In deviation from shuttering operations with Dropheads, the following applies to shuttering with Propheads in the longitudinal field:

- Prop spacing in main beam direction 2.25 m.
- When using the Frame MRK, select the 225 length.
- Use slab props with Propheads instead of Dropheads.
- Early striking is not possible with Propheads.
- The installation of Cover Strips is not required.

Assembly

Assembly correspondingly takes place as described in Section A4 Longitudinal bay.





Fig. A4.23





Components:

- 2 Main Beam SLT
- 3 Panel SDP
- 6 Prophead SSK
- 8 Wall Holder SWH-2

SKYDECK Panel Slab Formwork

Instructions for Assembly and Use – Standard Configuration



System components

For the realization of compensations and shuttering of columns, a range of system components is available.



Secure filler plates with nails!

Edge Beam SRT 150-2, SRT 75-2

Install vertically (Fig. A5.01) or suspended (Fig. A5.02).

The locking pin (9.1/10.1) secures the Edge Beam SRT 150-2 (9) or SRT 75-2 (10):

- to the Main Beam SLT in a longitudinal direction. (Fig. A5.01 + A5.02)
- to the Prophead SSK in a transverse direction. (Fig. A5.03)
- to the Combihead SCK (7) in a longitudinal direction. (Fig. A5.04)
- in the End Support SSL (11) in a longitudinal direction. (Fig. A5.07)

Filler Timber SPH

Install Filler Timber SPH (12) vertically or horizontally.

- to the Combihead SCK. (Fig. A5.04)
- nailed laterally on the panel.
- horizontally, transverse to the suspended Edge Beam SRT. (Fig. A5.05 + A5.06)

End Support SSL

Use the End Support SSL as height adjustment for the transition from a standard bay to an infill area. (Fig. A5.07)

The End Support SSL must always be directly supported by means of a Prophead, Drophead or Combihead. (Fig. A5.08)

Components:

- Main Beam SLT 2
- Panel SDP 3
- Combihead SCK 7
- 9 Edge Beam SRT 150-2
- 9* Edge Beam SRT 150-2, suspended
- Edge Beam SRT 75-2 10
- 10* Edge Beam SRT 75-2, suspended
- End Support SSL 11
- 12 Filler Timber SPH









Fig. A5.08





Fig. A5.09



No End Support SSL without any direct support through Prophead, Drophead or Combihead.



SRT suspended*

Fig. A5.02

The asterisk (*) refers to the installation in a suspended position.



Combihead SCK

Used for longitudinal and transverse infills up to 25 cm.

The cantilever of the Head Plate is \leq 19 cm in longitudinal direction and \leq 12.5 cm in transverse direction. The Combihead (7) (Fig. A5.11) is a secure, non-movable and non-twisting support for:

- Main Beam SLT 225 (2).
- SLT 150 (2.5). (Fig. A5.10)
- Panel SDP (3). (Fig. A5.12)
- Edge Beam SRT-2 (9) and Filler Timber SPH (12) or timber provided by the contractor with b = 3.8 - 8 cm and h = 9.8 cm. (Fig. A5.13)
- End Support SSL (11). (Fig. A5.14)

Mounting the main beam

The Main Beam SLT must be mounted in the middle of the beam support of the SKYDECK Heads. The main beam connection (2.1) encloses the main beam support (7.1) of the head. (Fig. A5.10)

The Combihead SCK has 2 main beam supports and can be installed in both directions. In infill areas, the cantilever points towards the compensation.

Exceptions:

The cantilever points towards the main beam

- when using the End Support, (Fig. A5.14)
- when infill ≤ cantilever.
 (Fig. A5.14a)

Positioning the main beam

With inset props, the cantilever of the Combinead always points towards the main beam.

Position the Combihead so that the main beam support is securely positioned in the groove (2.8) of the main beam. (Fig. A5.15)





Fig. A5.11



Fig. A5.12



Fig. A5.14a





Fig. A5.14



Fig. A5.15



Inserting panels

With direct panel support, install the cantilever of the Combihead in the direction of the infill area. (Fig. A5.16)

The teeth in the plastic racks (7.2) on the cantilever hold the panels (3) in 5 different positions. Select support position according to the compensation width. Position the cantilever of the Combihead SCK as close as possible to the wall in order to provide maximum support for the infill area. (Fig. A5.17c - A5.17d)







Fig. A5.16

Fig. A5.17





Fig. A5.17a

Fig. A5.17c

Fig. A5.17e

 \bigcirc

Fig. A5.17b





Fig. A5.17d



Fig. A5.17f

O not install

Do not install panels in a longitudinal direction outside of the longitudinal axis of the Combihead. (Fig. A5.17e + A5.17f)

Components:

- 1 Drophead SFK
- 2 Main Beam SLT
- **3** Panel SDP
- 7 Combihead SCK
- **14** Triangular Frame SDR







Fig. A5.18

Fig. A5.18a





With a transverse positioned Combihead, e.g. in compensation areas, position panels at least as far as the central axis or further!

In corners where longitudinal and transverse compensations meet, the Combihead (7) is aligned in the direction of the main beam. (Fig. A5.19 A)

Install the cantilever of the Combihead (7) up to the compensation area. (Fig. A5.19 B)

In the system with the Drophead (1), the Combihead (7) is always installed transversely if it is positioned under a cover strip. As a result, the panels are prevented from slipping out of position. (Fig. A5.19 C)



Fig. A5.19

PERI®

Triangular Frame SDR 150/75, 75/75

Form infill areas with inclined walls using triangular frames.

Forming the infills

- 1. Continue forming in the system as long as possible.
- Carry on forming operations with filler panels as well as transversely inserted panels - as for longitudinal and transverse compensations.
- 3. Lay Triangular Frame (14) on the support (Main Beam, Prophead or Combihead, End Support). (Fig. A5.20)
- 4. Place the support on the wall side.
- 5. Install formlining and secure in position with nails.



Fig. A5.20

Length compensations



Secure filler plates with nails!

Drophead infills up to 2.25 m + 5 cm. Prophead infills up to 2.25 m.

Length of room minus n x 2.30 m (2.25 m) = compensation area. See Tables: Filler plates, forming around columns

Forming longitudinal compensations between 75 cm and 2.25 m

- 1. Continue forming with prop, Compensation Beam SLT 150 (2.5) and Panel SDP (3) as in the standard bay. (Fig. A5.21)
- 2. Depending on the required load-bearing capacity, continue forming with filler panels. See PERI Tables.
- 3. Forming of gaps up to 75 cm, see following pages.



- Take into account the load-bearing capacity and supporting direction of the formlining. See PERI Tables.
- Timbers are securely nailed on the panel inner side before panels are assembled. Use the nail holes in the panel edge struts.



Gap 0 - 6 cm

- 1. Place Combihead SCK (7) or Prophead SSK (6) in a recessed position under the Main Beam SLT (2.5).
- 2. Nail Filler Timber SPH (12) or timber up to max. 6 cm on the panel.
- 3. Install formlining (16) and secure with nails. (Fig. A5.22 + A5.23)







Fig. A5.23

Gap 5 - 12.5 cm

- 1. Place Main Beam SLT (2) on inset prop with Combihead SCK (7) or Prophead SSK (6).
- 2. Place additional props with transversely positioned Combihead SCK (7a) in an offset arrangement.
- 3. Install Filler Timber SPH (12) or Edge Beam SRT-2 (9).
- 4. Install formlining and secure in position with nails. (Fig. A5.24 + A5.25)





Fig. A5.25

Components:

- 1 Drophead SFK
- 2.5 Main Beam SLT 150
- 3 Panel SDP
- 6 Prophead SSK
- 7 Combihead SCK
- 9 Edge Beam SRT-2 150
- 11 End Support SSL
- 12 Filler Timber SPH
- 13 Timber
- 14 Triangular Frame
- **15** Additional prop with crosshead and formwork girder
- **16** 21 mm formlining provided by the contractor

PERI

Gap 12.5 - 20 cm

- 1. Mount Combihead SCK turned by 180° (7) or Prophead SSK in the main beam support.
- 2. Install End Support, Filler Timber and Edge Beam.
- Install formlining and secure in position with nails.
 (Fig. A5.26 + A5.27)





Fig. A5.26

Fig. A5.27

Gap 20 - 75 cm

- Install Main Beam in Drophead SFK (1) (Fig. A5.31), Combihead SCK (7) turned by 180° (Fig. A5.32) or Prophead SSK (6) (Fig. A5.33).
- 2. Mount End Support (11) and Edge Beam (9).
- 3. Position additional prop with crosshead and formwork girder (15).
- 4. Install formlining and secure in position with nails. (Fig. A5.28 A5.30)



Fig. A5.28



Fig. A5.29



Fig. A5.30

Transverse compensation



Secure filler plates with nails!

Max. infills are 1.50 m. Infills are calculated based on the room length - n x 1.50 m. See Tables: Filler plates, forming around columns

Forming the infills

Transverse infill between 75 cm and 1.50 m

- 1. Continue forming with prop, Main Beam SLT 225 (2) and transversely-positioned panel (3). Close the spacing to the next prophead with Panel SDP 75 x 75 (3a). (Fig. A5.31 + A5.32)
- 2. Depending on the required load-bearing capacity, continue forming with filler panels. See PERI Tables.
- 3. Form gaps up to 75 cm; see following pages.

→

- Take into account the load-bearing capacity and supporting direction of the formlining. See PERI Tables.
- Timbers are securely nailed or screwed on the panel inner side before panels are assembled. Use the nail holes in the panel edge struts.

Components:

- 1 Drophead SFK
- 3 Panel SDP
- 6 Prophead SSK
- 7 Combihead SCK
- 9 Edge Beam SRT-2 150
- 11 End Support SSL
- 12 Filler Timber SPH
- **15** Additional prop with crosshead and formwork girder
- **16** 21 mm formlining provided by the contractor



Fig. A5.31



Fig. A5.32

PERI

Gap 0 - 12 cm

- 1. Place Panel SDP (3) over the Main Beam SLT (2) and secure with Panel Wedge Clip (20). (Fig. A5.33 - A5.35)
- Nail Filler Timber SPH (12) or timber (13) up to max. 6 cm on the panel. (Fig. A5.35) Screw Filler Timber SPH (12) or timber (13) up to max. 12 cm on the panel. (Fig. A5.36)
- 3. Install formlining (16) and secure with nails.



If panels (3) are placed over the main beam (2), the panel edge cannot laterally stabilize the main beam.

→ Secure every main beam with a Panel Wedge Clip SPKK to prevent overturning!





Fig. A5.33



Fig. A5.34

Fig. A5.35

Gap 5 - 12.5 cm

- 1. Position Combihead SCK (7) with cantilever in the direction of the infill.
- 2. Install Panel (3).
- 3. Install Edge Beam SRT-2 (9) or Filler Timber SPH (12) in the Combihead (7).
- 4. Install formlining (16) and secure with nails. (Fig. A5.36)



Fig. A5.36
A5 Compensations

Gap 12.5 - 25 cm

- 1. Position Combihead SCK (7) with cantilever in the direction of the infill.
- 2. Install Panel (3).
- 3. Install Edge Beam SRT-2 (9) or Filler Timber SPH (12) in the Combihead.
- 4. Install formlining (16) and secure with nails. (Fig. A5.37)

Alternative

- 1. Place Panel SDP (3) over the Main Beam SLT (2) and secure with Panel Wedge Clip (20).
- 2. Screw Filler Timber SPH (12) or timber on the panel.
- 3. Position additional prop with Crosshead (15) and formwork girder.
- 4. Install formlining (16) and secure with nails. (Fig. A5.38)

Gap 25 - 75 cm

- 1. Mount the Panel SDP (3) in the Main Beam (2).
- 2. Insert Edge Beam SRT-2 (9) in the Main Beam.
- 3. Position additional prop with Crosshead (15) and formwork girder.
- 4. Install formlining (16) and secure with nails. (Fig. A5.39 + A5.40)



Fig. A5.37









- **1** Drophead SFK
- 2 Main Beam SLT
- 3 Panel SDP
- 6 Prophead SSK
- 7 Combihead SCK
- 9 Edge Beam SRT-2 150
- **12** Filler Timber SPH
- 13 Timber
- **15** Additional prop with crosshead and formwork girder
- 16 Plywood
- 20 Panel Wedge Clip SPKK

Fig. A5.40

1 recessed panel

Maximum column dimensions x = 55 cm, y = 138 cm.



Secure filler plates with nails!

Install Edge Beam SRT 150-2 vertically (9) or Filler Timber SPH 150 (12). During use, permissible loads must be observed; see Tables: Filler plates, forming around columns



Take into account the supporting direction of the formlining.

Alternatively:

Install Edge Beam SRT-2 150 (9*) in a suspended position. (Fig. A6.03) Flatly position Filler Timber SPH or install timber (13) supplied by the contractor.

For 27 mm formlining: height of timber = 47 mm.

Permissible widths of influence for flat Filler Timber SPH, see Table A6.02.

Components

- 9 Edge Beam SRT 150-2
- **10** Edge Beam SRT 75-2
- 9* Edge Beam SRT 150-2, suspended
- 10* Edge Beam SRT 75-2, suspended
- 12 Filler Timber SPH
- 13 Timber







PFR

Fig. A6.02







PERI

2 recessed panels

Maximum column dimensions x = 65 cm, y = 138 cm.

Secure filler plates with nails!

Install Edge Beam SRT 150-2 (9) vertically at the panel edge. Insert Edge Beam SRT 150-2 (9*) in a suspended position at the column. Likewise, insert Edge Beam SRT 75-2 (10*) in the Edge Beam (9*) in a suspended position. (Fig. A6.05 + A6.06)



Fig. A6.06

Maximum column dimensions x = 130 cm, y = 138 cm.

Depending on the slab thickness and prop width, the transverse-positioned filler plates are to be additionally supported, see Table A6.02.

Install Edge Beam SRT 150-2 (9*) in a suspended position. Lay Filler Timber SPH 150 (12) in a flat position. Permissible widths of influence for flat Filler Timber SPH, see Table A6.02 on next page. (Fig. A6.07 + A6.08)

With smaller cross-sections, form infill areas with Panel SDP 37.5.



Take into account the supporting direction of the formlining.





Fig. A6.08

PERI

3 recessed panels

Maximum column dimensions x = 138 cm, y = 142 cm.



Secure filler plates with nails!

Edge Beam SRT 150-2 (9) vertical, Edge Beam SRT 150-2 (9*) suspended, Filler Timber SPH 150 (12) horizontally. (Fig. A6.09, Fig. A6.10)



Fig. A6.10

Additional Edge Beam SRT 150-2 (9) required with:

Slab thickness d [m]	Column side y [m]
≤ 0.20	no additional SRT
0.25	≤ 0.40
0.30	≤ 0.70
0.40	≤ 1.15

Table A6.01

For other slab thicknesses, the values are interpolated linearly.



Take into account the supporting direction of the formlining.

Permissible width of influence of flat Filler Timber SPH, maximum deformation I/500

	permissible width of influence Filler Timber SPH flat e SPH, flat [cm]						
	with span LSPH [cm]						
Slab thickness	100	80	60				
14	30	58	137				
16	26	51	121				
18	23	46	108				
20	21	41	98				
22	19	38	89				
24	18	35	82				
25	17	33	79				
26	16	32	76				
28	15	30	71				
30	14	28	66				
35	12	24	57				
40	11	21	50				
43	10	20	46				

Table A6.02

PERI



Take into account the supporting direction of the formlining.

- 6 Prophead SSK
- 9 Edge Beam SRT 150-2
- 9* Edge Beam SRT 150-2 suspended
- 10 Edge Beam SRT 75-2
- 11 End Support SSL
- 12 Filler Timber SPH
- 13 Timber



Transfer of horizontal loads into the columns of the building

The horizontal loads according to DIN EN 12812 are to be accommodated by the building walls, columns or bracing. SKYDECK is able to transfer these loads into the building columns according to Table A7.01 without requiring any additional bracing.

The prerequisite is that the building columns can accommodate the horizontal loads according to the table.

At the edge of the slab, corresponding loads, e.g. from the stopend formwork pressure, platforms or wind, must be separately anchored.



With a rectangular column grid, the largest column spacing is decisive.

Slab thickness	Panel span	Maximum perm. column grid (building columns)	Horizontal load per column (building column)
[cm]	[cm]	a [m]	H [kN]
14	150	10.31	9.44
16	150	9.26	8.48
18	150	8.39	7.69
20	150	7.68	7.03
22	150	7.07	6.48
24	150	6.56	6.00
25	150	6.32	5.79
26	150	6.11	5.59
28	150	5.71	5.23
30	150	5.37	4.92
35	150	4.63	4.24
40	150	4.06	3.72
43	150	3.77	3.45
45	75	3.59	3.29
50	75	3.21	2.94
55	75	2.90	2.66
60	75	2.68	2.45
65	75	2.48	2.27
70	75	2.31	2.12
75	75	2.17	1.99
80	75	2.05	1.88
85	75	1.95	1.78
90	75	1.85	1.70

Table A7.01

Example

Slab thickness 30 cm, panel span 150 cm.

 → permissible column grid without bracing the SKYDECK: = 5.37 m (a).
 → Horizontal load to be transferred:

H = 4.92 kN.

This load must be verified by the structural engineer regarding the respective column in the actual building condition. (Fig. A7.01)





General



- Do not access the forming area before the formwork has been horizontally anchored!
- Do not access the cantilevers before the bracing has been securely mounted!

Formwork positioned on open building edges or concreting sections is to be secured against horizontal loads by means of bracing.

Cantilevers, e.g. on edge areas, must be additionally vertically braced in order to prevent any tilting.

Example calculation: see Transfer of horizontal loads from a casting segment.

Bracing of the inner bay

- Maintain spacings
- Bays must be braced longitudinally and laterally

Assembly

- 1. Mount Base Plate on a sufficiently load-bearing surface area, e.g. using PERI Anchor Bolt 14/20x130, Item no. 124777. Take into consideration the Technical Data Sheet!
- 2. Attach Anchor Chain to the panels:
 - In the longitudinal direction, attach Anchor Chain (23) to the Tension Sleeve SAO (39). (Fig. A7.03)
 - In the transverse direction, connect panels to scaffold tube (31). Wrap Chain (23) around the scaffold tube. (Fig. A7.03a)
- 3. Secure Anchor Chain to Base Plate using bolts, and secure bolts by means of cotter pins. (Fig. A7.03b)

Components

- **23** Anchor Chain (permissible tension force = 3 kN)
- 24 Base Plate RS
- **24.1** Anchor Bolt PERI 14/20 x 130
- 31 Scaffold tube
- 39 Tension Sleeve SAO



Longitudinal direction

Lateral direction



Fig. A7.03

Fig. A7.03a



Fig. A7.03b



Transfer of horizontal loads from a casting segment

Example 1

Open building edge on one side

Bracing in one building direction. (Fig. A7.05) Values: see Table A14.01.

Requirements

Calculation

- Load case combination LFK 1: Concreting
- Load case combination LFK 2: Storm
- Slab thickness d = 25 cm
- Panel span = 1.50 m
- 1 edge area
- 9 inner bays

Number of chains

- The load case combination which
- results in the biggest value is decisive.
 Permissible horizontal component of the tension load on the anchor chain
 = 3 kN x cos 60° = 1.5 kN. (Fig. A7.04)

Load compilation LFK 1 Concreting

 $1 \times H_{load}$ edge area $+ 9 \times H_{load}$ inner bay $= \sum H$ 2.447 kN $+ (9 \times 0.54$ kN) = 7.307 kN

Load compilation LFK 2 Storm

Number of chains

Fig. A7.05

$$\begin{split} &\sum H = 1.588 \text{ kN} < 7.307 \text{ kN LFK 1 Concreting is decisive} \\ &n_{\text{chain}} &= \sum H \text{ / perm. tension force of chain} \\ &= 7.31 \text{ kN: } 1.5 \text{ kN} = 4.87 \text{ chains} = \textbf{5 chains} \end{split}$$









Fig. A7.06

	Load	Horizontal Load	d edge area [kN]	Load case combination LFK 1: Concreting*				Load case combination LFK 2: Storm**			
Slab according		c = 1.50 m	c = 0.75 m	Horizontal Lo	oad _{inner bay} [kN]	Horizontal Lo	ad _{edge area} [kN]	Horizontal Lo	ad _{inner bay} [kN]	Horizontal Lo	ad _{edge area} [kN]
thickness	to DIN	from	from								
[cm]	EN 12812	stopend	stopend	Panel span	Panel span	Panel span	Panel span	Panel span	Panel span	Panel span	Panel span
	[kN/m²]	formwork	formwork	c = 1.50 m	c = 0.75 m	c = 1.50 m	c = 0.75 m	c = 1.50 m	c = 0.75 m	c = 1.50 m	c = 0.75 m
		pressure	pressure								
25	7.83	1.430	0.715	0.540	0.270	2.447	1.224	0.033	0.016	1.291	0.645

Excerpt from Table A14.01

Example 2:

Open building edge on both sides

Bracing in both building directions. (Fig. A7.08) Values: see Table A14.01.

Requirements

- Load case combination LFK 1: Concreting
- Load case combination LFK 2: Storm
- Slab thickness d = 25 cm
- Panel span = 1.50 m
- 2 edge areas
- 8 inner bays

Number of chains

- The load case combination which results in the biggest value is decisive.
- Permissible horizontal component of the tension load on the anchor chain
 2 kN x cos 60° = 1.5 kN (Fig. A7.04)
 - = $3 \text{ kN} \times \cos 60^{\circ} = 1.5 \text{ kN}$. (Fig. A7.04)



Fig. A7.04

Calculation

Load compilation LFK 1 Concreting

 $2 \times (H_{load} \text{ edge area} - \text{stopendformwork pressure}^*) + (8 \times H_{load} \text{ inner bay}) = \sum H$ $2 \times (2.447 \text{ kN} - 1.43 \text{ kN}) + (8 \times 0.54 \text{ kN}) = 6.354 \text{ kN}$

Load compilation LFK 2 Storm

 $2 \times H_{load}$ edge area + (8 x H_{load} inner bay) = ΣH 2 x 1.291 kN + (8 x 0.033 kN) = 2.846 kN

Number of chains

 Σ H = 2.846 kN < 6.354 kN LFK 1 Concreting is decisive

 $n_{chain} = \sum H / perm.$ tension force of chain

= 6.354 kN: 1.5 kN = 4.236 chains = 5 chains per load direction



Fig. A7.08



*The stopend formwork pressure is already included in load case combination LFK 1 for edge areas. Through reciprocal elimination on both sides of the open building edge, this value must be deducted from both sides.

A8 Cantilevers, guardrails

PERI®

Bracing on open building edges to prevent tipping



Horizontal loads must be additionally taken into consideration and transferred, e.g. with bracing; see Section A7.

Cantilevers with SKYDECK Platforms SDB

Mount Tension Sleeve SAO (39) on main beam. Distance to inner prop max. 50 cm. Brace using Anchor Chain (23), Base Plate (24) and Anchor Bolt (24.1). (Fig. A8.01)

Max. slab overhang: 37.5 cm. (Fig.A8.01 + A8.02)

Corner table:

The Main Beams SLT "A + B" receive 2-fold horizontal load from the wind and 1-fold load from the stopend formwork pressure. Additional bracing is required.



Fig. A8.01

Components

- **23** Anchor Chain (permissible tension force = 3 kN)
- 24 Base Plate RS
- 24.1 Anchor Bolt PERI 14/20 x 130
- 39 Tension Sleeve SAO
- 45 SKYDECK Platform SDK



SKYDECK Panel Slab Formwork Instructions for Assembly and Use – Standard Configuration

Fig. A8.03 shows only bracing from load case Tilting.

Take into account Section A9 SKYDECK Platforms!

A8 Cantilevers, guardrails

Guardrails with Handrail Unit SD

– SD 75

- SD 150

The SKYDECK Handrail Unit SD secures site personnel working on a casting segment against falling in the main bay direction.



Risk of falling! During assembly of the Handrail Unit, measures must be taken to prevent falling, e.g. PPE!

Assembly

A free length of at least 35 cm must be available on the main beam in order to be able to mount a Handrail Unit SD. (Fig. A8.04a)

- 1. Pull lug (25.1) upwards. (Fig. A8.07)
- 2. Move the Handrail Unit SD (25) firstly in the direction of the building edge (I.) and then downwards (II.) (Fig. A8.04a)
- 3. Place Handrail Unit SD with the hooks (25.2) between the two teeth (2.2) which are free on the main beam.
 - → The lug falls downwards. Hooks engage and are secured. If the lug is not completely down, then press lug (25.1) downwards by stepping on it. (Fig. A8.05) The Handrail Unit is installed. (Fig. A8.06)

C

- Is the lug completely folded down?
- Do the hooks enclose the teeth of the main beam? (Fig. A8.05)

Dismantling

- 1. Pull lug (25.1) upwards. (Fig. A8.07) → Hooks are released.
- 2. Lift out Handrail Unit SD (25) and place in Pallet Handrail Unit SD 150 x 75.

 Main bay direction

 25

 25

 25

 25.1

 25.1

 25.1

 25.1

 25.1

 25.1

 25.1

 25.2

 25.2

Fig. A8.05



Fig. A8.04a



Fig. A8.06a

A8 Cantilevers, guardrails

SKYDECK Guardrail Holder SGH and Guardrail Post SGP



Risk of falling! During assembly, measures must be taken to prevent falling, e.g. PPE!

Assembly

Continuously mount Guardrail Holders SGH (17) between the panels. To do so, place the guardrail holder laterally offset on the main beam and slide in. Spacing max. 1.55 m.

→

Wind safeguard measure: with wind speeds > 90 km/h, remove the top guardrail board. Adapt working area accordingly to suit changed guardrail situation.

After the last row of panels, mount the Guardrail Holder SGH for the End Guardrail Frame on all main beams:

- 1. Start with the guardrail holder on the outer right-hand side (17.1) as viewed when standing in front of the formwork. Mounting bar is pointing to the left.
- 2. Mount all other guardrail holders (17) with the mounting bar pointing to the right. (Fig. A8.09) The mounting bars overlap in the first bay.
- 3. Insert guardrail posts (18).
- 4. Insert guardrail boards and secure with nails. (Fig. A8.10)

Components

- 17 Guardrail Holder SGH
- **18** Guardrail Post SPG
- 20 Panel Wedge Clip SPKK



Regarding the tightness of the panel joints, e.g. for casting segments/setting of stopends, push the panels tightly together and secure on the last main beam with Panel Wedge Clips SPKK (20).



PFRI









Fig. A8.11

PERI

PERI

Overview

The SKYDCK Platform SDB is a prefabricated, foldable scaffold platform for use as a working scaffold following DIN EN 12811, Load Class 2, with a permissible load of 1.5 kN/m² (150 kg/m²). It secures the open building edges of the SKYDECK Slab Formwork.

Assembly of the slab formwork in connection with SKYDECK Platform SDB is carried out in four areas. (Rom. I - IV) The sequence must be maintained. (Fig. A9.01)

Risk of falling!

- Ensure that end-to-end side protection is installed on slabs that have been completed!
- Cantilevers should not have formwork erected or be stepped on before being firmly secured with tension chains.
- Work to be carried out by qualified personnel only!



When using SKYDECK Platforms, no safety scaffold is required for the levels below.







Corner table (Area I)



Risk of falling! Ensure that end-to-end side protection is installed on slabs that have been completed!

Begin forming operations on a free building corner.

The corner table is assembled on the previously concreted slab in the inside of the building. Subsequently, position in the corner (Area I) and secure against tipping. (Fig. A9.01)

Frame assembly

- 1. Spindle out the MULTIPROP Props MP (35) 3 cm on a narrow side. The two props opposite (35.1) are not spindled out. As a result, the height difference resulting from the different installations of the main beam is compensated. The exact height adjustment takes place later.
- 2. Four MULTIPROP Props are placed in a 1.50 m x 2.25 m grid with the spindles (inner tube) downwards and formed into a base frame using MULTIPROP MRK 150 (36) and MRK 225 (36.1) Frames. (Fig. A9.02) Mount the frame at the same level above the slab. Locking wedges (36.2) are facing outwards.
- 3. Attach two Propheads SSK (6) on the extended props.

Assembly of the main beams

- 1. Insert each Main Beam SLT 375 into a main beam groove:
 - Use two Bolts M12 x 140 DIN 6914 (37) for fixing timbers 8/12.
 - 2 x Table Connector STV (38).
 - Sequence and alignment of bolts and table connectors: see Fig. A9.03.
- 2. Mount Main Beam SLT 375 (2.6) and set the beam down on the front props.
- 3. Push the Table Connector STV up to the MULTIPROP Props and make a secure connection by tightening the ring bolts. (Fig. A9.03a)





Main Beam Support SSK (shown without table connector)



- 2.6 Main Beam SLT 375
- 6 Prophead SSK
- 35 MULTIPROP Prop MP
- 36 MULTIPROP Frame MRK
- **37** Bolt M12 x 140
- 38 Table Connector STV

PERI

- Insert two SAO Tension Sleeves approx. 1 m in each of the grooves of 3 Main Beams SLT 375. Tension sleeves later lie between the two bottom main beams.
- 5. Position Main Beams SLT 375 (2.6) transversely with 1.50 m spacings on the already assembled main beams. At the rear, all three beams have an overhang of 37.5 cm. The first beam is laterally inset 37.5 cm on the lower beam.
- Insert additional Tension Sleeves SAO (39) on both sides as far as the bottom main beams.Push the previously mounted tension sleeves inwards against the bottom main beams. (Fig. A9.04a)
- 7. Connect the beams together by tightening the tension sleeves.

Mounting the timbers

Timbers are required for load distribution when directly reaching under with the transportation fork.

- 1. Attach 2 timbers with min. 8/12/225 (40) (supplied by contractor) to the hex. bolts using nuts and washers. (Fig. A9.04)
- 2. Diagonally brace the timbers.

Insert panels

The first row of panels (3) is inset 37.5 cm and begins in the centre aligned to the first bottom main beam.

- 1. Insert the SDP 150 x 75 panels from below and secure to the main beams with two SPK Panel Clamps per panel.
- 2. The middle panels are additionally fixed to the front outer panels using two Panel Wedge Clamps SPKK (20) each.
- 3. On the side cantilevered slab edge: install the Guardrail Holder SGH.
- Mount Guardrail Posts SGP and handrail boards as anti-fall protection. (Fig. A9.05)

- 2.6 Main Beam SLT 375
- **17** Guardrail Holder SGH
- 20 Panel Wedge Clip SPKK
- 21 Panel Clip SPK
- **37** Bolt M12 x 140**39** Tension Sleeve SAO
- 40 Timber





Supporting the top main beams

- Insert Table Connector STV into the longitudinal grooves of the top main beams (2.6) which are later positioned in the building.
- Fix 2 MULTIPROP Props MP (35)
 1.50 m from the cantilevered girder end using the Table Connector STV (38).
- 3. Brace the MULTIPROP Props MP with MULTIPROP Frame MRK 150 (36).
- 4. Connect the Frames MRK 150 to the Frames MRK 225 (36.1) with at least one scaffold tube L = 2.25 m (31) and three scaffold couplings. (Fig. A9.06)
- 5. Mount the inner SKYDECK Platform SDB (45). (Fig. A9.06a)
- 6. Insert Panels SDP.

Position corner table



Follow Instructions for Use, SKYDECK Lifting Fork!

- 1. Raise the corner table using the SKYDECK Transportation Fork and extend the Props MP to the required length.
- 2. Position the corner table at the corner of the building so that the front MULTIPROP Props MP (35) are as close as possible to the edge of the building. (Fig. A9.06a)



Risk of falling!

- Do not erect formwork or step on corner table before the tension chains are securely fixed.
- Do not close the filler areas until the corner table has been securely fixed and SKYDECK platforms have been attached.

- 2.6 Main Beam SLT 375
- 31 Scaffold Tube
- **35** MULTIPROP Prop MP
- 36 MULTIPROP Frame MRK
- 38 Table Connector STV
- **45** SKYDECK Platform SDK





PERI®

Tensioning the corner tables

->

Use anchor chains for securing the tables to the floor.

- Attach one tension chain (23) to the outer Table Connector STV (38) on each of the bottom Main Beams SLT 375, and diagonally tension.
- 2. Attach one tension chain (23.1) to the Tension Sleeve SAO on the first top and inner Main Beam SLT 375, and diagonally tension.
- 3. On the middle, top main beam, attach two tension chains to the Tension Sleeves SAO. Diagonally (23.2) tension the first tension chain; the second tension chain (23.3) is vertically tensioned. (Fig. A9.07 + A9.07a)



Risk of falling! During assembly, measures must be taken to prevent falling, e.g. PPE!

- 4. Mount the SKYDECK Platform SDB (45): see A9 Platform installation.
- 5. Close the filler areas: see A5 Compensations and A6 Shuttering around columns.



Fig. A9.07 additional prop prop additional prop



- 23 Tension chain
- **38** Table Connector STV
- 45 SKYDECK Platform SDK

Cantilevers (Area II)

Risk of falling!

- Ensure that end-to-end side protection is installed on slabs that have been completed!
- Cantilevered platforms should not have formwork erected or be stepped on before being firmly secured with tension chains.

Continue forming after erecting the corner table (Area I) in Area II with main beams. Main beams are laid parallel to the upper beams of the corner table. Start shuttering at the edge of the slab.

- 1. Place prop with Drophead SFK (1) at slab edge and secure with tripod.
- Connect Main Beam SLT 375 (2.6) and support by means of a second prop with Prophead SSK (6) after
 2.275 m at the edge of the building. (Formed exclusively with prophead; position front prop at a distance of 2.25 m).
- 3. Mount Tension Sleeve SAO (39) in the main beam groove. Distance \leq 50 cm from the non-cantilevered end.
- 4. Attach tension chain (23) with turnbuckle to the eye at the top, and anchor to the ground by means of a base plate (24). (Fig. A9.08)
- 5. Bay by bay immediately install 3 Panels 150 x 75 (3) and 1 Filler Panel 150 x 37.5 (3a) from below as far as the platform support (2.7) of the Main Beam SLT 375. For example, with the PERI Stripping Cart ASW 465.



- Depending on the thickness of the slab, position additional props and girders at corresponding distances.
- In those areas where the 1.50 m grid is interrupted by columns etc., a 75 cm bay may be installed. Tension Sleeves SAO are used to secure against tipping.



- * with the installation of Frames MRK 230 or MRK 225: turn the Prophead SSK by 45°.
- ** first chain: 90° bracing angle for accommodating the tilting moment.
- *** following chains: 60° bracing angle for accommodating the horizontal loads.



Fig. A9.09



- Are the props in line with the props of the corner table? (Fig. A9.08)
- Is the Main Beam SLT mounted centrally in the beam support of the heads? Does the main beam connection enclose the main beam support of the head? (Fig. A9.09)

- 1 Drophead SFK
- 2.6 Main Beam SLT 375
- 2.7 Platform Support
- 3 Panel SDP 150 x 75
- 3a Panel SDP 150 x 37.5
- 6 Prophead SSK
- 10 Edge Beam SRT
- 19 Timber
- 20 Panel Wedge Clip SPKK
- 23 Tension chain
- 24 Base Plate RS
- 39 Tension Sleeve SAO



Start shuttering on structural constraint points (e.g. wall, casting segment) and work towards the corner table, Area II.

Slab area (Area IV)

When all edge areas are formed, the slab surface Area IV is formed in the usual way with SKYDECK.



Regarding the tightness of the panel joints, e.g. for casting segments/setting of stopends, push the panels tightly together and secure on the last main beam with Panel Wedge Clips SPKK (20).

Components

- 2 Main Beam SLT 225
- 2.6 Main Beam SLT 375
- 10 Edge Beam SRT
- 19 Timber
- **20** Panel Wedge Clip SPKK
- 45 SKYDECK Platform SDB 300
- 46 SKYDECK Platform SDB 150
- 47 SKYDECK Platform SDB 225

Infill areas



Risk of falling!

- Cantilevers should not have formwork erected or be stepped on before being firmly secured with tension chains.
- When working on the slab formwork, measures must be taken to prevent falling, e.g. PPE.
- Clearly mark unsecured building edges!

Close infill areas in the inner area, close infill areas at unsecured building edges after the platforms have been installed.



PFR







SKYDECK Panel Slab Formwork Instructions for Assembly and Use – Standard Configuration

Platform installation



Risk of falling!

- Cantilevers should not have formwork erected or be stepped on before being firmly secured with tension chains.
- When working on the slab formwork, measures must be taken to prevent falling, e.g. PPE.
- Clearly mark unsecured building edges!

Begin with the platform assembly in one area in which there is no risk of falling to the rear or to one side (e.g. Area II, see Ground Plan Fig. A9.01).

- 1. With the help of the Shuttering Aid SSH, access the recess of the platform decking and pull the platform out from its safe position. (Fig. A9.12)
- 2. Move the platform into position at an angle from above in front of the last panel onto the cantilevered main beam.
- 3. Positive assembly is carried out by further lowering the platform:
 - The slide (45.1) on the underside of the platform is secured when positioned in the platform support (2.7) on the Main Beam SLT 375. (Fig. A9.12a)

 \rightarrow The platform is locked in position

and secured against tipping.

- The anti-slip device locks into the teeth of the main beam.
 - → The platform is secured against moving in the longitudinal direction of the beam.
- 4. Detach both crane hooks. Site personnel must wear personal protection equipment (PPE) to prevent falling!
 - Crane eye swivels downwards and the securing hook grips under the self-draining edges of the main beam. If necessary, press down the crane eye.
 - → The platform is additionally secured against tipping and lifting. (Fig. A9.12b)
- 5. Install other platforms in the same way with the shuttering aid.
- 6. Close infill areas < 75 cm using contractor's own resources, e.g. scaffold planks 24 x 4.5 cm.



7. Handrails for infill areas are created using handrail boards 3 x 15 cm and toe boards (use nail holes in platform guardrails) or standard couplings and scaffold tubes.



For difficult assembly situations, e.g. wind, guide the platform with 2 shuttering aids. (Fig. A9.13)



Fig. A9.13



Striking



Risk of falling!

When attaching the platforms to the crane lifting gear, site personnel must wear personal protection equipment (PPE) to prevent falling.

Open edge areas

- 1. Strike the SKYDECK Slab Formwork in Area IV, see ground plan Fig. A9.01, in the direction of the slab edge up to the last but one bay of the cantilevered edge area.
- 2. Important: do not lower the props (1c, 35) of the cantilevered Main Beams SLT 375 (2.6), do not release the bracing!
- 3. Lower the dropheads or props (1a, 1b).
- 4. Strike the panels and main beams in the last but one standard bay (A).
 (Fig. A9.15). Do not strike bays B + C yet!
- 5. Mount end-to-end side protection on slabs that have been completed.
- 6. Attach 2-sling lifting gear to crane eyes of the platform decking.
 → The securing hook is released.
- 7. The platforms are now moved to the next place of use. (Fig. A9.14)
- 8. Loosen the tension chains in the edge area (bays B + C), lower the dropheads or props, remove panels and main beams.

Corner table

- If this has not already been done: mount end-to-end side protection on slabs that have been completed.
- 2. Raise the external and internal platforms.
- 3. Move the SKYDECK Transportation Fork under the timbers of the table.
- 4. Loosen the tension chains on the corner tables.
- 5. Retract the MULTIPROP Props MP. In areas with parapet walls, continue to retract or remove the props.
- 6. Lower the corner table.
- 7. Remove the infill area around the columns.
- 8. Move the table horizontally in the direction of Area III.

Components

- 1 Drophead SFK
- 2.6 Main Beam SLT 375
- 2.7 Platform Support
- 23 Tension chain
- 24 Base Plate RS
- **35** MULTIPROP Prop MP
- 45 SKYDECK Platform SDK



Fig. A9.15

1a

Δ

Working and safety scaffold

Use the SKYDECK Platform SDB 300 for longer slab sections.

Also for corner tables, the Platform SDB 300 can be used instead of the Platform SDB 150.

Use the Platform SDB 225 as a compensation platform.

The Platform SDB 225 has 4 slides on the underside. This means the platform can therefore cantilever to the right or the left by 75 cm if required. This is necessary to accommodate interruptions such as columns, offset walls or at an external wall. (Fig. A9.16)

The various platforms in use form a working and safety scaffold according to DIN 4420, Part 1. With 1.30 m platform width they fulfil the safety scaffold requirements for a maximum 3.0 m falling height, which is required for the construction of supports or columns. (Fig. A9.17)



Fig. A9.16

DIN 4420 T1, Table 1:

Falling height H [m]	to	2.00	3.00
Min. spacing B [m]	min.	0.90	1.30



Do not assemble push-pull props on the platform nor store materials! (Fig. A9.17a)

Take into account the permissible load of 1.5 kN/m² (150kg/m²)!





Fig. A9.17

Fig. A9.17a

PERI®

Main bays

System with Prophead SSK

If the Prophead SSK is used in the main bay, then the Transition Head SDFK (26) in connection with MULTIPROP Props is to be used when changing direction. Mount the Transition Head SDSK on the slab props using the two bolts and nuts (26.1) which are included in the delivery. During assembly of the prophead ensure that the collar of the nut (26.1) points towards the support of the MULTIPROP Props. Otherwise, overlapping may occur between nut and weld seam.

Changing the main bay direction by 90°

With the change in direction, the main bays are turned 90° without having to assemble a new system.

As a result, T- and L-shaped ground plans are possible.

The change of direction is realized using the Main Beams SLT 150 in the outer row of the main bay.



- The Transition Head SDSK must be mounted on the slab prop using the two bolts and nuts (26.1) which are included in the delivery.
- The Prophead SDSK for changing direction must be used with 3 Main Beams SLT!

Overview

(Fig. A10.02)

Assembly of main bay direction

Assemble slab formwork in the direction of the main bay with slab props, Prophead SSK (6), Main Beam SLT 225 (2) and Panels SDP (3): see Section A4 Shuttering.



6

2



26

2.5

Fig. A10.02

6

Starting bay of the trans-

verse bay direction

2

Ε



Fig. A10.02a

Changing direction

- Main bay direction
- Install slab prop with Prophead SDSK (26) with a spacing of 1.50 m and secure with tripods.
- 2. Mount Main Beam SLT 150 (2.5) instead of SLT 225. (Fig. A10.02 + A10.02a)
- Transverse bay direction
- Continue assembling in the direction of the transverse bay with slab prop, Prophead SSK (6) and Main Beams SLT: see Section A4 Shuttering. (Fig. A10.02 + A10.03) Secure slab props with tripods.
- 4. Install Panels SDP 150 x 75 (3) in the direction of the transverse bay. (Fig. A10.02)
- 5. If a gap occurs with the Panel SDP between the transverse bay direction and main bay direction, this is closed using filler timber (12) and filler plate (16).(Fig. A10.04)



Section B-B

1x 2x 1x

1x

1x

Х

1x

1x

with filler timber



Required components per change of direction bays.

26	Prophead SDSK*
26.1	Bolt M12 with MP Nut
6	Prophead SSK
2.5	Main Beam SLT 150
•	Main Dans CLT OOF**

- 2 Main Beam SLT 225**
- **3** Panel SDP**
- 12 Filler Timber SPH
- **16** Filler Plate

* Transition Head SDSK

** depending on size of bay or plan

Change in direction in the edge bay with Main Beam SLT 375



PERI®

System with Drophead SFK

If the Drophead SFK is used in the main bay, then the Transition Head SDFK (27) is to be used when changing direction. It consists of a Drophead (27.1) and Connector (27.2).

Changing the main bay direction by 90°

With the change in direction, the main bays are turned 90° without having to assemble a new system.

As a result, T- and L-shaped ground plans are possible.

→

The change of direction is realized using Main Beams SLT, additional slab props with Transition Head SDFK in the outer row of the main bay as well as Frame MRK.

Required components per change of direction bays.

1	Drophead SFK
2	Main Beam SLT 225
2a	Main Beam SLT 150 / 225
3	Panel SDP 150 x 75
3.1	Panel SDP 150 x 37.5
9	Edge Beam SRT 150-2
11	End Support SSL
12	Filler Timber SPH
16	Filler Plate
27.1	Drophead SDFK*
27.2	Connector SDFK*
30	Tripod

* Transition Head SDFK

Overview

(Fig. A10.06 + A10.06a)

Assembly of main bay direction

Assemble slab formwork in the direction of the main bay with slab props, Drophead SFK (1), Main Beam SLT 225 (2) and Panels SDP (3): see Section A4 Shuttering.



Fig. A10.06

1x

1x 1x

1x 1x

1x

1x

1x

1x 1x

1x

1x

Section A-A



Changing direction

Main bay direction

- 1. Insert the Connector (27.1) with the groove bolt into the Main Beam SLT 225 (main bay) and tighten by hand. (Fig. A10.07)
- 2. Mount the Transition Head Upper Part SDFK (27.2) individually or with the slab prop in the connector. (Fig. A10.07a)
- 3. Mount the second Drophead SDFK at a distance of 1.50 m. (Fig. A10.06)

First transverse bay 1.50 m x 1.50 m

- 4. Position one slab prop with Drophead SFK (1a) in the direction of the transverse bay. (Fig. A10.06)
- 5. Position second slab prop with Drophead SFK (1b) and secure slab props with tripods (30). (Fig. A10.06)
- 6. Mount Main Beam SLT 150 / 225 (2a) in the Dropheads. (Fig. A10.06, A10.08, A10.08a)

Additional transverse bays

Assemble additional transverse bays in the same way as the first transverse bay along the Main Beam SLT 225. (Fig. A10.06)

- Spacing (bay width) 1.50 m,
- without Frame MRK,

see Section A4 Shuttering.

Install Panels SDP:

Insert panels in the direction of the main bay.

- 1. Insert Panel SDP 150 x 75 (3a).
- 2. Insert Filler Panel SDP 150 x 37.5 (3.1).
- 3. Fix End Support SSL (11) to the Main Beam SLT in the infill area. Install Edge Beam SRT 150-2 (9) as well as Filler Timber SPH 225 (12) and filler plates (16), see Section A5 Compensations.

(Fig. A10.06, A10.06a, A10.08a)

Continue assembling the transverse bays

Assemble transverse bay with slab props, Drophead SFK (1), Main Beam SLT 225 (2) and Panels SDP (3), see Section A4 Shuttering.

→

If a Drophead SDFK encounters the position of a Drophead SFK in the direction of the main bay, a 75 cm intermediate bay is to be installed. After this, installation continues with spacings of 1.50 m. (Fig. A10.09)





Section B-B with filler timber

Fig. A10.08a

Fig. A10.09



Ε

50

SKYDECK Panel Slab Formwork

Instructions for Assembly and Use - Standard Configuration

A11 Inclined slabs

PERI

The Main Beam SLT must be positioned in the direction of the slab inclination. Align Props with Drophead SFK at right-angles to the Main Beams SLT 225.

The use with Prophead SSK is also possible. (Fig. A11.01)



When using PEP Slab Props, the Drophead SFK is diagonally bolted by means of 2 Bolts M12 x 35-8.8 and Nut M12. Tension forces and prop loads: see Table A15.01.

Bracing with Tension Sleeve SAO and Chain 3.0 kN

Assembly

- 1. Set up first bay with tripods or Frame MRK.
- 2. Mount Base Plate (24) on a sufficiently load-bearing surface area, e.g. using PERI Anchor Bolt 14/20x130, item no. 124777. Take into consideration the Technical Data Sheet!
- 3. Screw on Tension Sleeve SAO (39) to Main Beam SLT.
- 4. Attach Anchor Chain (23) to Tension Sleeve SAO (39).
- 5. Secure Anchor Chain to Base Plate using bolts, and secure bolts by means of cotter pins.
- 6. Pretension Anchor Chain. (Fig. A11.01)

- 23 Anchor Chain (permissible ten-
- sion force = 3 kN)
- 24 Base Plate RS
- 24.1 Anchor Bolt PERI 14/20 x 130
- **39** Tension Sleeve SAO



Fig. A11.01

A11 Inclined slabs

Bracing with Tension Unit SD



Selection of bracing angle α : see Table A15.02.

Tension forces and prop loads: see Tables A15.03 - A15.08. Bracing angle with Drophead SFK

max. 60°.

Bracing angle with Prophead SSK max. 50°.

Assembly

- 1. Position slab prop with tripod.
- 2. Place the Tension Unit Upper Part (41.1) on the end plates of the Main Beam SLT (2.8) and attach the Main Beam to the Drophead SFK. (Fig. A11.03)
- 3. Swivel up the Main Beam with the second slab prop. Tension Unit must lie on the end plates of the Main Beam SLT.
- 4. Mount Base Plate-2 (29) on a sufficiently load-bearing surface area, e.g. using PERI Anchor Bolt 14/20x130, Item no. 124777. Take into consideration the Technical Data Sheet!
- 5 Insert the Tie Yoke of the Tension Unit Upper Part onto the Tie Rod (41.3), secure with the Hex. Nut SW 30/50 (42), and attach to the Tension Unit Upper Part. (Fig. A11.03 + A11.04)
- 6. Fix Tension Unit Lower Part (41.2) to the Base Plate by means of bolts, and secure bolts using cotter pins. (Fig. A11.02)
- 7. Insert Tie Yoke of the Tension Unit Lower Part onto the Tie Rod, secure with Triple Wingnut DW 15 (43), and attach to the Tension Unit Lower Part. (Fig. A11.05 + A11.06)
- 8. Tension the Tension Unit using a Triple Wingnut.

- 29 Base Plate-2 RS
- 24.1 Anchor Bolt PERI 14/20 x 130
- 41 Tension Unit SD



Fig. A11.02









A12 Striking



Striking times: see Tables! Keep access ways free!

Dismantling takes place from a safe and secure position, e.g. with PERI Stripping Cart ASW 465.

Lowering

- Lower dropheads over large area. Release wedges with hammer. Pay attention to direction of wedge!
 - → Between the panel and slab underside there is a clearance of approx. 6 cm. (Fig. A12.01)

Edge infills

Striking of the transverse infills takes place first and then of the longitudinal infills.

- Remove props and store in pallets.
- Dismantle system supplements such as filler timbers, edge beams, end supports and combiheads, and store in pallets. (Fig. A12.02)
- Remove filler plates.



- Striking is carried out by means of a safe mobile scaffold!
- Unsupported slab props can overturn. Secure by means of tripods.



Fig. A12.01



Fig. A12.02

A12 Striking

Panels

Always begin in the corner where both infills meet.

- Dismantle Panels SDP in one bay after the other begin with the middle panel.
- Lift panel and push aside approx.
 10 cm in the direction of the compensation area. Pivot downwards and store in pallets.

(Fig. A12.03)

Main Beam

 Pivot Main Beam SLT slowly downwards, remove and store in pallets.
 (Fig. A12.04)

Only Drophead Props (1) with Cover Strips SAL (4) remain standing. (Fig. A12.05)

Remaining areas

- Remove props on walls and store in pallets.
- Remove infill areas around columns.

After reaching the required concrete strength

- lower Drophead Props, remove props and store in pallets.
- remove Cover Strips SAL (4).



With larger spans, begin in the middle with lowering and removal of the props.

Cleaning

Clean SKYDECK components before the next use and spray once again, e.g. with PERI Bio Clean.

See introduction "Cleaning and maintenance".



Fig. A12.03



Fig. A12.04



Fig. A12.05

A13 Site record



Company:	
Project:	
Component:	

This page is to be copied, filled out and filed in the daily construction records.

	Slab thickness	= cm
the formwork	Clear room height	= m
	Prop length = clear room height - formwork assembly height (with Drophead: 41 cm)	= m
on of	Max. panel span	= cm
tallati	Selected prop	=
on / Ins	Actual prop load (according to PERI Tables)	= kN
Executio	Direction of assembly	Inner tube bottom Outer tube bottom
	≤ perm. prop load (according to PERI Tables)	= kN
bu	Check whether above assumpti	ons and/or specifications apply on the
concret	construction site Slab thickness	= cm
efore e	Max. panel span	= cm
ite be	Selected prop	= m
tion s	Selected prop length	= m
construc	Direction of assembly	Inner tube bottom
to be carried out on the	Are all props in both axes in a vertical position? $\leq 1\%$	yes
	Horizontal support for the formwork available in all directions?	yes
	Mounted parts are obviously undam- aged?	yes
Check	Required bracing has been mounted?	yes

Date

Site manager in charge (Signature)

Place

A14 Horizontal loads with Slab Props PEP

System with Drophead SFK or Prophead SSK and Main Beam SLT 225

- Horizontal loads per edge area are determined for an open building edge on one side!
- Bolt Drophead SFK to Slab Prop PEP!
- Increase prop loads in the braced areas by $\Delta V = 2.60 \text{ kN!}$

	Load Horizontal Load edge area [kN]			Load case combination LFK 1: Concreting*				Load case combination LFK 2: Storm**			
Slab	according	c = 1,50 m	c = 0,75 m	Horizontal Lo	ad _{inner bay} [kN]	Horizontal Lo	ad _{edge area} [kN]	Horizontal Lo	ad _{inner bay} [kN]	Horizontal Lo	ad _{edge area} [kN]
thickness [cm]	to DIN EN 12812 [kN/m²]	from stopend formwork pressure	from stopend formwork pressure	Panel span c = 1.50 m	Panel span c = 0.75 m	Panel span c = 1.50 m	Panel span c = 0.75 m	Panel span c = 1.50 m	Panel span c = 0.75 m	Panel span c = 1.50 m	Panel span c = 0.75 m
14	5.13	0.518	0.259	0.354	0.177	1.349	0.675	0.033	0.016	1.232	0.616
16	5.62	0.650	0.325	0.388	0.194	1.516	0.758	0.033	0.016	1.232	0.616
18	6.11	0.798	0.399	0.422	0.211	1.697	0.849	0.033	0.016	1.232	0.616
20	6.60	0.960	0.480	0.455	0.228	1.893	0.947	0.033	0.016	1.232	0.616
22	7.09	1.137	0.568	0.489	0.245	2.104	1.052	0.033	0.016	1.256	0.628
24	7.58	1.328	0.664	0.523	0.262	2.329	1.165	0.033	0.016	1.279	0.639
25	7.83	1.430	0.715	0.540	0.270	2.447	1.224	0.033	0.016	1.291	0.645
26	8.07	1.535	0.767	0.557	0.278	2.569	1.285	0.033	0.016	1.302	0.651
28	8.56	1.756	0.878	0.591	0.295	2.824	1.412	0.033	0.016	1.326	0.663
30	9.05	1.991	0.996	0.624	0.312	3.094	1.547	0.033	0.016	1.349	0.675
35	10.38	2.701	1.351	0.716	0.358	3.895	1.948	0.033	0.016	1.408	0.704
40	11.73	3.528	1.764	0.809	0.405	4.815	2.408	0.033	0.016	1.466	0.733
43	12.54	4.077	2.039	0.865	0.433	5.425	2.712	0.033	0.016	1.501	0.751
45	13.08		2.233		0.451		2.926		0.016		0.762
50	14.43		2.756		0.498		3.500		0.016		0.792
55	15.77		3.335		0.544		4.129		0.016		0.821
60	17.12		3.969		0.591		4.814		0.016		0.850
65	18.47		4.658		0.637		5.553		0.016		0.879
70	19.82		5.402		0.684		6.347		0.016		0.909
75	21.08		6.152		0.727		7.145		0.016		0.938
80	22.30		6.930		0.769		7.968		0.016		0.967
85	23.53		7.754		0.812		8.838		0.016		0.996
90	24.75		8.623		0.854		9.753		0.016		1.026

Table A14.01

* Load case combination LFK 1: working operations + tilting position + stopend formwork pressure + working wind speed

** Load case combination LFK 2: tilting position (without concrete load) + maximum wind speed [before concreting] PFR

A15 Inclined slabs



Maximum permissible slab inclination with Tension Sleeve SAO and Chain 3.0 kN

Considered horizontal loads

Horizontal load from working operations

= 1% of the vertical load (DIN EN 12812; 8.2.2.2)

Horizontal load from the tilting position = 1% of the vertical load (DIN EN 12812; 9.3.4.2)

Angle α between Chain and SLT 225 = 60° Max. tension force of Tension Sleeve SAO and Anchor Chain = 3.0 kN

		Panel span c = 1.50 m [cm]		Panel span c = 0.75 m [cm]			
			max. slab i	max. slab inclination		max. slab i	nclination
Slab thickness	Load DIN EN 12812	increased prop load	Incline	Angle	increased prop load	Incline	Angle
[cm]	[kN/m²]	[kN]	[%]	[°]	[kN]	[%]	[°]
14	5.13	20.3	5.4	3.1	11.4	11.1	6.3
16	5.62	22.0	4.8	2.8	12.3	10.2	5.8
18	6.11	23.7	4.3	2.5	13.1	9.4	5.4
20	6.60	25.4	3.9	2.2	14.0	8.7	5.0
22	7.09	27.1	3.5	2.0	14.8	8.1	4.6
24	7.58	28.7	3.2	1.8	15.7	7.6	4.3
25	7.83	29.6	3.1	1.8	16.1	7.3	4.2
26	8.07	30.4	2.9	1.7	16.5	7.1	4.1
28	8.56	32.1	2.7	1.5	17.4	6.6	3.8
30	9.05	33.8	2.4	1.4	18.2	6.2	3.6
35	10.38	38.4	1.9	1.1	20.5	5.3	3.0
40	11.73	43.1	1.5	0.8	22.8	4.6	2.6
43	12.54	45.9	1.3	0.7	24.2	4.2	2.4
45	13.08				25.2	4.0	2.3
50	14.43				27.5	3.5	2.0
55	15.77				29.8	3.0	1.7
60	17.12				32.1	2.7	1.5
65	18.47				34.5	2.4	1.3
70	19.82				36.8	2.1	1.2
75	21.08				39.0	1.8	1.1
80	22.30				41.1	1.7	0.9
85	23.53				43.2	1.5	0.8
90	24.75				45.3	1.3	0.8

Table A15.01

SKYDECK Tension Unit SD - bracing angle α selection

Angle α Tension Unit	possible clea with SSK a	r room height nd SLT 225	possible clear room height with SFK and SLT 225		
SD	SD min h _{minimum clearance} max h _{minimum clearance}		min h _{minimum clearance}	max h _{minimum clearance}	
30 °	1.72 m	2.01 m	1.73 m	2.02 m	
35 °	2.02 m	2.34 m	2.04 m	2.36 m	
40 °	2.37 m	2.71 m	2.39 m	2.73 m	
45 °	2.77 m	3.12 m	2.80 m	3.15 m	
50 °	3.25 m	3.60 m	3.28 m	3.63 m	
55 °	3.84 m	4.16 m	3.88 m	4.20 m	
60 °	4.60 m	4.87 m	4.65 m	4.91 m	

Table A15.02

A15 Inclined slabs

Tension force of Tension Unit SD and system prop loads with Drophead SFK



 The Drophead SFK is bolted to the PEP Slab Props.

Considered horizontal loads

Horizontal load from working operations = 1% of the vertical load (DIN EN 12812; 8.2.2.2) Horizontal load from the tilting position = 1% of the vertical load (DIN EN 12812; 9.3.4.2)

The PEP Props are to be assembled with the inner tube bottom.

Inclination of slab 1%

	max. in	clination		5 conne	cted bays	4 connected bays		3 connected bays	
				Tension		Tension		Tension	
Angle α			Standard	force	Braced prop	force	Braced prop	force	Braced prop
Tension Unit	Incline	Angle β	prop	Tension	Full load	Tension Unit	Full load	Tension Unit	Full load
SD	[%]	[°]	Full load	Unit SD	V _{ges}	SD	V _{ges}	SD	V _{ges}

Slab thickness 20 cm, q = 6.60 kN/m²

30 °	1.0%	0.6 °	22.8 kN	3.9 kN	24.7 kN	3.2 kN	24.3 kN	2.4 kN	24.0 kN
35 °	1.0%	0.6 °	22.8 kN	4.2 kN	25.2 kN	3.3 kN	24.7 kN	2.5 kN	24.2 kN
40 °	1.0%	0.6 °	22.8 kN	4.5 kN	25.6 kN	3.6 kN	25.1 kN	2.7 kN	24.5 kN
45 °	1.0%	0.6 °	22.8 kN	4.8 kN	26.2 kN	3.9 kN	25.5 kN	2.9 kN	24.8 kN
50 °	1.0%	0.6 °	22.8 kN	5.3 kN	26.8 kN	4.3 kN	26.0 kN	3.2 kN	25.2 kN
55 °	1.0%	0.6 °	22.8 kN	6.0 kN	27.6 kN	4.8 kN	26.7 kN	3.6 kN	25.7 kN
60 °	1.0%	0.6 °	22.8 kN	6.8 kN	28.7 kN	5.5 kN	27.5 kN	4.1 kN	26.3 kN

Slab thickness 24 cm, q = 7.58 kN/m²

30 °	1.0%	0.6 °	26.2 kN	4.5 kN	28.4 kN	3.6 kN	28.0 kN	2.7 kN	27.5 kN
35 °	1.0%	0.6 °	26.2 kN	4.8 kN	28.9 kN	3.8 kN	28.3 kN	2.9 kN	27.8 kN
40 °	1.0%	0.6 °	26.2 kN	5.1 kN	29.4 kN	4.1 kN	28.8 kN	3.1 kN	28.1 kN
45 °	1.0%	0.6 °	26.2 kN	5.5 kN	30.1 kN	4.4 kN	29.3 kN	3.3 kN	28.5 kN
50 °	1.0%	0.6 °	26.2 kN	6.1 kN	30.8 kN	4.9 kN	29.9 kN	3.7 kN	29.0 kN
55 °	1.0%	0.6 °	26.2 kN	6.8 kN	31.8 kN	5.5 kN	30.6 kN	4.1 kN	29.5 kN
60 °	1.0%	0.6 °	26.2 kN	7.8 kN	32.9 kN	6.3 kN	31.6 kN	4.7 kN	30.2 kN

Slab thickness 25 cm, $q = 7.83 \text{ kN/m}^2$

30 °	1.0%	0.6 °	27.0 kN	4.7 kN	29.4 kN	3.7 kN	28.9 kN	2.8 kN	28.4 kN
35 °	1.0%	0.6 °	27.0 kN	4.9 kN	29.9 kN	4.0 kN	29.3 kN	3.0 kN	28.7 kN
40 °	1.0%	0.6 °	27.0 kN	5.3 kN	30.4 kN	4.2 kN	29.7 kN	3.2 kN	29.1 kN
45 °	1.0%	0.6 °	27.0 kN	5.7 kN	31.1 kN	4.6 kN	30.3 kN	3.4 kN	29.4 kN
50 °	1.0%	0.6 °	27.0 kN	6.3 kN	31.8 kN	5.0 kN	30.9 kN	3.8 kN	29.9 kN
55 °	1.0%	0.6 °	27.0 kN	7.1 kN	32.8 kN	5.7 kN	31.6 kN	4.2 kN	30.5 kN
60 °	1.0%	0.6 °	27.0 kN	8.1 kN	34.0 kN	6.5 kN	32.6 kN	4.9 kN	31.2 kN

Slab thickness 30 cm, q = 9.05 kN/m²

30 °	1.0%	0.6 °	31.2 kN	5.4 kN	33.9 kN	4.3 kN	33.4 kN	3.2 kN	32.8 kN
35 °	1.0%	0.6 °	31.2 kN	5.7 kN	34.5 kN	4.6 kN	33.8 kN	3.4 kN	33.2 kN
40 °	1.0%	0.6 °	31.2 kN	6.1 kN	35.2 kN	4.9 kN	34.4 kN	3.7 kN	33.6 kN
45 °	1.0%	0.6 °	31.2 kN	6.6 kN	35.9 kN	5.3 kN	35.0 kN	4.0 kN	34.0 kN
50 °	1.0%	0.6 °	31.2 kN	7.3 kN	36.8 kN	5.8 kN	35.7 kN	4.4 kN	34.6 kN
55 °	1.0%	0.6 °	31.2 kN	8.2 kN	37.9 kN	6.5 kN	36.6 kN	4.9 kN	35.2 kN
60 °	1.0%	0.6 °	31.2 kN	9.4 kN	39.3 kN	7.5 kN	37.7 kN	5.6 kN	36.1 kN

Table A15.03

A15 Inclined slabs

System with Drophead SFK Tension force of Tension Unit SD and prop loads



 The Drophead SFK is bolted to the PEP Props.

- The PEP Props are to be assembled with the inner tube bottom.

Considered horizontal loads

Horizontal load from working operations = 1% of the vertical load (DIN EN 12812; 8.2.2.2) Horizontal load from the tilting position = 1% of the vertical load (DIN EN 12812; 9.3.4.2)

Inclination of slab 5%

	max. in	clination		5 conne	cted bays	4 connected bays		3 connected bays	
				Tension		Tension		Tension	
Angle α			Standard	force	Braced prop	force	Braced prop	force	Braced prop
Tension Unit	Incline	Angle β	prop	Tension	Full load	Tension Unit	Full load	Tension Unit	Full load
SD	[%]	[°]	Full load	Unit SD	V _{ges}	SD	V _{ges}	SD	V _{ges}

Slab thickness 20 cm, q = 6.60 kN/m²

30 °	5.0%	2.9 °	22.8 kN	9.2 kN	27.4 kN	7.4 kN	26.5 kN	5.5 kN	25.5 kN
35 °	5.0%	2.9 °	22.8 kN	9.7 kN	28.4 kN	7.8 kN	27.2 kN	5.8 kN	26.1 kN
40 °	5.0%	2.9 °	22.8 kN	10.4 kN	29.5 kN	8.3 kN	28.1 kN	6.2 kN	26.8 kN
45 °	5.0%	2.9 °	22.8 kN	11.3 kN	30.7 kN	9.0 kN	29.1 kN	6.8 kN	27.6 kN
50 °	5.0%	2.9 °	22.8 kN	-	-	9.9 kN	30.4 kN	7.4 kN	28.5 kN
55 °	5.0%	2.9 °	22.8 kN	-	-	11.1 kN	31.9 kN	8.3 kN	29.6 kN
60 °	5.0%	2.9 °	22.8 kN	-	_	-	_	9.6 kN	31.1 kN

Slab thickness 24 cm, q = 7.58 kN/m²

30 °	5.0%	2.9 °	26.2 kN	10.6 kN	31.4 kN	8.5 kN	30.4 kN	6.3 kN	29.3 kN
35 °	5.0%	2.9 °	26.2 kN	11.2 kN	32.6 kN	8.9 kN	31.3 kN	6.7 kN	30.0 kN
40 °	5.0%	2.9 °	26.2 kN	11.9 kN	33.8 kN	9.6 kN	32.3 kN	7.2 kN	30.8 kN
45 °	5.0%	2.9 °	26.2 kN	12.9 kN	35.3 kN	10.4 kN	33.5 kN	7.8 kN	31.6 kN
50 °	5.0%	2.9 °	26.2 kN	-	-	11.4 kN	34.9 kN	8.5 kN	32.7 kN
55 °	5.0%	2.9 °	26.2 kN	-	_	12.8 kN	36.6 kN	9.6 kN	34.0 kN
60 °	5.0%	2.9 °	26.2 kN	-	-	-	-	11.0 kN	35.7 kN

Slab thickness 25 cm, $q = 7.83 \text{ kN/m}^2$

30 °	5.0%	2.9 °	27.0 kN	10.9 kN	32.5 kN	8.7 kN	31.4 kN	6.6 kN	30.3 kN
35 °	5.0%	2.9 °	27.0 kN	11.5 kN	33.6 kN	9.2 kN	32.3 kN	6.9 kN	31.0 kN
40 °	5.0%	2.9 °	27.0 kN	12.3 kN	34.9 kN	9.9 kN	33.4 kN	7.4 kN	31.8 kN
45 °	5.0%	2.9 °	27.0 kN	13.4 kN	36.5 kN	10.7 kN	34.6 kN	8.0 kN	32.7 kN
50 °	5.0%	2.9 °	27.0 kN	-	_	11.8 kN	36.0 kN	8.8 kN	33.8 kN
55 °	5.0%	2.9 °	27.0 kN	-	_	13.2 kN	37.8 kN	9.9 kN	35.1 kN
60 °	5.0%	2.9 °	27.0 kN	-	-	-	_	11.3 kN	36.8 kN

Slab thickness 30 cm, q = 9.05 kN/m^2

30 °	5.0%	2.9 °	31.2 kN	12.6 kN	37.5 kN	10.1 kN	36.3 kN	7.6 kN	35.0 kN
35 °	5.0%	2.9 °	31.2 kN	13.3 kN	38.9 kN	10.7 kN	37.3 kN	8.0 kN	35.8 kN
40 °	5.0%	2.9 °	31.2 kN	14.3 kN	40.4 kN	11.4 kN	38.6 kN	8.6 kN	36.7 kN
45 °	5.0%	2.9 °	31.2 kN	15.5 kN	42.2 kN	12.4 kN	40.0 kN	9.3 kN	37.8 kN
50 °	5.0%	2.9 °	31.2 kN	-	-	13.6 kN	41.6 kN	10.2 kN	39.0 kN
55 °	5.0%	2.9 °	31.2 kN	-	-	15.2 kN	43.7 kN	11.4 kN	40.6 kN
60 °	5.0%	2.9 °	31.2 kN	-	-	-	-	13.1 kN	42.6 kN

Table A15.04
System with Drophead SFK Tension force of Tension Unit SD and prop loads



- The Drophead SFK is bolted to the PEP Props.

bled with the inner tube bottom.

- The PEP Props are to be assem-

Considered horizontal loads

Horizontal load from working operations = 1% of the vertical load (DIN EN 12812; 8.2.2.2) Horizontal load from the tilting position = 1% of the vertical load (DIN EN 12812; 9.3.4.2)

Inclination of slab 9%

	max. inclination			5 connected bays		4 connected bays		3 connected bays	
				Tension		Tension		Tension	
Angle α			Standard	force	Braced prop	force	Braced prop	force	Braced prop
Tension Unit	Incline	Angle β	prop	Tension	Full load	Tension Unit	Full load	Tension Unit	Full load
SD	[%]	[°]	Full load	Unit SD	V _{ges}	SD	V _{ges}	SD	V _{ges}

Slab thickness 20 cm, q = 6.60 kN/m²

30 °	9.0%	5.1 °	22.8 kN	14.5 kN	30.0 kN	11.6 kN	28.6 kN	8.7 kN	27.1 kN
35 °	9.0%	5.1 °	22.8 kN	15.3 kN	31.5 kN	12.2 kN	29.8 kN	9.2 kN	28.0 kN
40 °	9.0%	5.1 °	22.8 kN	-	-	13.1 kN	31.2 kN	9.8 kN	29.1 kN
45 °	9.0%	5.1 °	22.8 kN	-	-	-	-	10.6 kN	30.3 kN
50 °	9.0%	5.1 °	22.8 kN	-	-	-	-	11.7 kN	31.7 kN
55 °	9.0%	5.1 °	22.8 kN	-	-	-	-	-	-
60 °	9.0%	5.1 °	22.8 kN	-	_	-	_	-	_

Slab thickness 24 cm, q = 7.58 kN/m²

30 °	9.0%	5.1 °	26.2 kN	16.6 kN	34.5 kN	13.3 kN	32.8 kN	10.0 kN	31.1 kN
35 °	9.0%	5.1 °	26.2 kN	17.6 kN	36.2 kN	14.0 kN	34.2 kN	10.5 kN	32.2 kN
40 °	9.0%	5.1 °	26.2 kN	-	-	15.0 kN	35.8 kN	11.3 kN	33.4 kN
45 °	9.0%	5.1 °	26.2 kN	-	-	-	-	12.2 kN	34.8 kN
50 °	9.0%	5.1 °	26.2 kN	-	-	-	-	13.4 kN	36.4 kN
55 °	9.0%	5.1 °	26.2 kN	-	-	-	-	-	-
60 °	9.0%	5.1 °	26.2 kN	-	-	-	-	-	-

Slab thickness 25 cm, q = 7.83 kN/m²

30 °	9.0%	5.1 °	27.0 kN	17.2 kN	35.6 kN	13.7 kN	33.9 kN	10.3 kN	32.2 kN
35 °	9.0%	5.1 °	27.0 kN	18.1 kN	37.4 kN	14.5 kN	35.3 kN	10.9 kN	33.3 kN
40 °	9.0%	5.1 °	27.0 kN	-	-	15.5 kN	37.0 kN	11.6 kN	34.5 kN
45 °	9.0%	5.1 °	27.0 kN	-	-	-	_	12.6 kN	35.9 kN
50 °	9.0%	5.1 °	27.0 kN	-	-	-	-	13.9 kN	37.6 kN
55 °	9.0%	5.1 °	27.0 kN	-	-	-	_	-	-
60 °	9.0%	5.1 °	27.0 kN	-	_	-	_	-	-

Slab thickness 30 cm, $q = 9.05 \text{ kN/m}^2$

30 °	9.0%	5.1 °	31.2 kN	19.8 kN	41.1 kN	15.9 kN	39.2 kN	11.9 kN	37.2 kN
35 °	9.0%	5.1 °	31.2 kN	21.0 kN	43.2 kN	16.8 kN	40.8 kN	12.6 kN	38.4 kN
40 °	9.0%	5.1 °	31.2 kN	-	-	17.9 kN	42.7 kN	13.5 kN	39.9 kN
45 °	9.0%	5.1 °	31.2 kN	-	-	-	-	14.6 kN	41.5 kN
50 °	9.0%	5.1 °	31.2 kN	-	-	-	_	16.0 kN	43.5 kN
55 °	9.0%	5.1 °	31.2 kN	-	-	-	-	-	-
60 °	9.0%	5.1 °	31.2 kN	_	-	_	-	-	-

System with Prophead SSK Tension force of Tension Unit SD and prop loads

Considered horizontal loads

Horizontal load from working operations	= 1% of the vertical load (DIN EN 12812; 8.2.2.2)
Horizontal load from the tilting position	= 1% of the vertical load (DIN EN 12812; 9.3.4.2)

When concreting, begin at the deepest point of the slab formwork!

Inclination of slab 1%

	max. inclination			5 connected bays		4 connected bays		3 connected bays	
Angle α Tension Unit SD	Incline [%]	Angle β [°]	Standard prop Full load	Tension force Tension Unit SD	Braced prop Full load V _{ges}	Tension force Tension Unit SD	Braced prop Full load V _{ges}	Tension force Tension Unit SD	Braced prop Full load V _{ges}

Slab thickness 20 cm, $q = 6.60 \text{ kN/m}^2$

30 °	1.0%	0.6 °	22.3 kN	3.9 kN	24.2 kN	3.1 kN	23.8 kN	2.3 kN	23.4 kN
35 °	1.0%	0.6 °	22.3 kN	4.1 kN	24.6 kN	3.3 kN	24.1 kN	2.4 kN	23.7 kN
40 °	1.0%	0.6 °	22.3 kN	4.4 kN	25.1 kN	3.5 kN	24.5 kN	2.6 kN	24.0 kN
45 °	1.0%	0.6 °	22.3 kN	4.7 kN	25.6 kN	3.8 kN	24.9 kN	2.8 kN	24.3 kN
50 °	1.0%	0.6 °	22.3 kN	5.2 kN	26.3 kN	4.2 kN	25.5 kN	3.1 kN	24.7 kN

Slab thickness 24 cm, q = 7.58 kN/m²

30 °	1.0%	0.6 °	25.6 kN	4.4 kN	27.8 kN	3.5 kN	27.4 kN	2.7 kN	26.9 kN
35 °	1.0%	0.6 °	25.6 kN	4.7 kN	28.3 kN	3.7 kN	27.7 kN	2.8 kN	27.2 kN
40 °	1.0%	0.6 °	25.6 kN	5.0 kN	28.8 kN	4.0 kN	28.2 kN	3.0 kN	27.5 kN
45 °	1.0%	0.6 °	25.6 kN	5.4 kN	29.4 kN	4.3 kN	28.7 kN	3.3 kN	27.9 kN
50 °	1.0%	0.6 °	25.6 kN	6.0 kN	30.2 kN	4.8 kN	29.2 kN	3.6 kN	28.3 kN

Slab thickness 25 cm, q = 7.83 kN/m²

30 °	1.0%	0.6 °	26.4 kN	4.6 kN	28.7 kN	3.7 kN	28.3 kN	2.7 kN	27.8 kN
35 °	1.0%	0.6 °	26.4 kN	4.8 kN	29.2 kN	3.9 kN	28.6 kN	2.9 kN	28.1 kN
40 °	1.0%	0.6 °	26.4 kN	5.2 kN	29.8 kN	4.1 kN	29.1 kN	3.1 kN	28.4 kN
45 °	1.0%	0.6 °	26.4 kN	5.6 kN	30.4 kN	4.5 kN	29.6 kN	3.4 kN	28.8 kN
50 °	1.0%	0.6 °	26.4 kN	6.2 kN	31.2 kN	4.9 kN	30.2 kN	3.7 kN	29.3 kN

Slab thickness 30 cm, $q = 9.05 \text{ kN/m}^2$

30 °	1.0%	0.6 °	30.5 kN	5.3 kN	33.2 kN	4.2 kN	32.7 kN	3.2 kN	32.1 kN
35 °	1.0%	0.6 °	30.5 kN	5.6 kN	33.8 kN	4.5 kN	33.1 kN	3.4 kN	32.5 kN
40 °	1.0%	0.6 °	30.5 kN	6.0 kN	34.4 kN	4.8 kN	33.6 kN	3.6 kN	32.9 kN
45 °	1.0%	0.6 °	30.5 kN	6.5 kN	35.1 kN	5.2 kN	34.2 kN	3.9 kN	33.3 kN
50 °	1.0%	0.6 °	30.5 kN	7.1 kN	36.0 kN	5.7 kN	34.9 kN	4.3 kN	33.8 kN

Considered horizontal loads

Horizontal load from working operations	= 1% of the vertical load (DIN EN 12812; 8.2.2.2)
Horizontal load from the tilting position	= 1% of the vertical load (DIN EN 12812; 9.3.4.2)

When concreting, begin at the deepest point of the slab formwork!

Inclination of slab 5%

	max. inclination			5 connected bays		4 connected bays		3 connected bays	
Angle α Tension Unit SD	Incline [%]	Angle β [°]	Standard prop Full load	Tension force Tension Unit SD	Braced prop Full load V _{ges}	Tension force Tension Unit SD	Braced prop Full load V _{ges}	Tension force Tension Unit SD	Braced prop Full load V _{ges}

Slab thickness 20 cm, $q = 6.60 \text{ kN/m}^2$

30 °	5.0%	2.9 °	22.3 kN	9.0 kN	26.8 kN	7.2 kN	25.9 kN	5.4 kN	25.0 kN
35 °	5.0%	2.9 °	22.3 kN	9.5 kN	27.7 kN	7.6 kN	26.6 kN	5.7 kN	25.6 kN
40 °	5.0%	2.9 °	22.3 kN	10.2 kN	28.8 kN	8.1 kN	27.5 kN	6.1 kN	26.2 kN
45 °	5.0%	2.9 °	22.3 kN	11.0 kN	30.1 kN	8.8 kN	28.5 kN	6.6 kN	27.0 kN
50 °	5.0%	2.9 °	22.3 kN	12.1 kN	31.6 kN	9.7 kN	29.7 kN	7.3 kN	27.8 kN

Slab thickness 24 cm, q = 7.58 kN/m²

30 °	5.0%	2.9 °	25.6 kN	10.3 kN	30.8 kN	8.3 kN	29.7 kN	6.2 kN	28.7 kN
35 °	5.0%	2.9 °	25.6 kN	10.9 kN	31.9 kN	8.7 kN	30.6 kN	6.6 kN	29.3 kN
40 °	5.0%	2.9 °	25.6 kN	11.7 kN	33.1 kN	9.4 kN	31.6 kN	7.0 kN	30.1 kN
45 °	5.0%	2.9 °	25.6 kN	12.7 kN	34.5 kN	10.1 kN	32.7 kN	7.6 kN	31.0 kN
50 °	5.0%	2.9 °	25.6 kN	13.9 kN	36.3 kN	11.1 kN	34.1 kN	8.4 kN	32.0 kN

Slab thickness 25 cm, q = 7.83 kN/m^2

30 °	5.0%	2.9 °	26.4 kN	10.7 kN	31.8 kN	8.5 kN	30.7 kN	6.4 kN	29.6 kN
35 °	5.0%	2.9 °	26.4 kN	11.3 kN	32.9 kN	9.0 kN	31.6 kN	6.8 kN	30.3 kN
40 °	5.0%	2.9 °	26.4 kN	12.1 kN	34.2 kN	9.7 kN	32.6 kN	7.2 kN	31.1 kN
45 °	5.0%	2.9 °	26.4 kN	13.1 kN	35.7 kN	10.5 kN	33.8 kN	7.8 kN	32.0 kN
50 °	5.0%	2.9 °	26.4 kN	14.4 kN	37.4 kN	11.5 kN	35.2 kN	8.6 kN	33.0 kN

Slab thickness 30 cm, q = 9.05 kN/m²

30 °	5.0%	2.9 °	30.5 kN	12.3 kN	36.7 kN	9.9 kN	35.5 kN	7.4 kN	34.2 kN
35 °	5.0%	2.9 °	30.5 kN	13.1 kN	38.0 kN	10.4 kN	36.5 kN	7.8 kN	35.0 kN
40 °	5.0%	2.9 °	30.5 kN	14.0 kN	39.5 kN	11.2 kN	37.7 kN	8.4 kN	35.9 kN
45 °	5.0%	2.9 °	30.5 kN	15.1 kN	41.2 kN	12.1 kN	39.1 kN	9.1 kN	37.0 kN
50 °	5.0%	2.9 °	30.5 kN	16.6 kN	43.3 kN	13.3 kN	40.7 kN	10.0 kN	38.2 kN

System with Prophead SSK Tension force of Tension Unit SD and prop loads

Considered horizontal loads

Horizontal load from working operations= 1% of the vertical load (DIN EN 12812; 8.2.2.2)Horizontal load from the tilting position= 1% of the vertical load (DIN EN 12812; 9.3.4.2)

When concreting, begin at the deepest point of the slab formwork!

Inclination of slab 9%

	max. in	clination		5 connected bays		4 connected bays		3 connected bays	
Angle α Tension Unit SD	Incline [%]	Angle β [°]	Standard prop Full load	Tension force Tension Unit SD	Braced prop Full load V _{ges}	Tension force Tension Unit SD	Braced prop Full load V _{ges}	Tension force Tension Unit SD	Braced prop Full load V _{ges}

Slab thickness 20 cm, q = 6.60 kN/m²

30 °	9.0%	5.1 °	22.3 kN	14.1 kN	29.3 kN	11.3 kN	27.9 kN	8.5 kN	26.5 kN
35 °	9.0%	5.1 °	22.3 kN	15.0 kN	30.9 kN	12.0 kN	29.1 kN	9.0 kN	27.4 kN
40 °	9.0%	5.1 °	22.3 kN	16.0 kN	32.6 kN	12.8 kN	30.5 kN	9.6 kN	28.4 kN
45 °	9.0%	5.1 °	22.3 kN	17.3 kN	34.5 kN	13.9 kN	32.1 kN	10.4 kN	29.6 kN
50 °	9.0%	5.1 °	22.3 kN	19.1 kN	36.9 kN	15.2 kN	34.0 kN	11.4 kN	31.0 kN

Slab thickness 24 cm, q = 7.58 kN/m²

30 °	9.0%	5.1 °	25.6 kN	16.2 kN	33.7 kN	13.0 kN	32.1 kN	9.7 kN	30.5 kN
35 °	9.0%	5.1 °	25.6 kN	17.2 kN	35.4 kN	13.7 kN	33.5 kN	10.3 kN	31.5 kN
40 °	9.0%	5.1 °	25.6 kN	18.4 kN	37.4 kN	14.7 kN	35.0 kN	11.0 kN	32.7 kN
45 °	9.0%	5.1 °	25.6 kN	19.9 kN	39.7 kN	15.9 kN	36.8 kN	11.9 kN	34.0 kN
50 °	9.0%	5.1 °	25.6 kN	21.9 kN	42.4 kN	17.5 kN	39.0 kN	13.1 kN	35.6 kN

Slab thickness 25 cm, q = 7.83 kN/m²

30 °	9.0%	5.1 °	26.4 kN	16.8 kN	34.8 kN	13.4 kN	33.1 kN	10.1 kN	31.5 kN
35 °	9.0%	5.1 °	26.4 kN	17.7 kN	36.6 kN	14.2 kN	34.6 kN	10.6 kN	32.5 kN
40 °	9.0%	5.1 °	26.4 kN	19.0 kN	38.6 kN	15.2 kN	36.2 kN	11.4 kN	33.7 kN
45 °	9.0%	5.1 °	26.4 kN	20.6 kN	41.0 kN	16.4 kN	38.1 kN	12.3 kN	35.1 kN
50 °	9.0%	5.1 °	26.4 kN	22.6 kN	43.7 kN	18.1 kN	40.3 kN	13.6 kN	36.8 kN

Slab thickness 30 cm, q = 9.05 kN/m²

30 °	9.0%	5.1 °	30.5 kN	19.4 kN	40.2 kN	15.5 kN	38.3 kN	11.6 kN	36.4 kN
35 °	9.0%	5.1 °	30.5 kN	20.5 kN	42.3 kN	16.4 kN	40.0 kN	12.3 kN	37.6 kN
40 °	9.0%	5.1 °	30.5 kN	21.9 kN	44.6 kN	17.5 kN	41.8 kN	13.2 kN	39.0 kN
45 °	9.0%	5.1 °	30.5 kN	23.8 kN	47.3 kN	19.0 kN	44.0 kN	14.3 kN	40.6 kN
50 °	9.0%	5.1 °	30.5 kN			20.9 kN	46.6 kN	15.7 kN	42.6 kN

A16 SKYDECK Prop loads with Drophead SFK

			Main Beam SLT 225								Main Beam SLT 150						
Ē		Pa	anel spar	n c 1.50	m	Pa	anel spar	n c 0.75	m	P	anel spar	n c 1.50	m	P	anel spar	n c 0.75	m
less d [N/m²]	Prop lo	ad [kN]	Defle line	ection e**	Prop lo	ad [kN]	Defle line	ection e**	Prop Ic	ad [kN]	Defle line	ection e**	Prop Ic	ad [kN]	Defle line	ection e**
Slab thickr	Load q* [k		with Centre Support SSK		with Centre Support SSK												
0.14	5.13	17.7		7		8.8		7		11.9		7					
0.16	5.62	19.4		7		9.7		7		13.1		7					
0.18	6.11	21.1		7		10.5		7		14.2		7					
0.20	6.60	22.8		7		11.4		7		15.3		7					
0.22	7.09	24.5		7		12.2		7		16.5		7					
0.24	7.58	26.2		7		13.1		7		17.6		7					
0.25	7.83	27.0		7		13.5		7		18.2		7					
0.26	8.07	27.8		7		13.9		7		18.8		7					
0.28	8.56	29.5	16.2	7	7	14.8		7		19.9		7					
0.30	9.05	31.2	17.2	7	7	15.6		7		21.0		7					
0.35	10.38	35.8	19.7	7	7	17.9		7		24.1		7					
0.40	11.73	40.5	22.3	6	7	20.2		7		27.3		7					
0.43	12.54	43.3	23.6	6	6	21.4		7		29.2		6					
0.45	13.08		24.8		6	22.6		7		30.4		6					
0.50	14.43		27.4		6	24.9		7		33.5		6					
0.52	14.96		28.4		6	25.8		7	7	34.8		6		17.4		7	
0.55	15.77					27.2		7	7					18.3		7	
0.60	17.12					29.5	17.7	7	7					19.9		7	
0.65	18.47					31.9	19.1	7	7					21.5		7	
0.70	19.82					34.2	20.5	6	7					23.0		7	
0.75	21.08					36.4	21.8	6	7					24.5		7	
0.80	22.30					38.5	23.1	6	7					25.9		7	
0.85	23.53					40.6	24.3	6	7					27.3		7	
0.90	24.75					42.7	25.6	6	7					28.8		6	
0.95	25.98						26.9		7					30.2		6	
1.00	27.20						28.2		6					31.6		6	
1.05	28.43						29.4		6					33.0		6	
1.09	29.35						30.4		6					34.1		6	

*Load according to DIN EN 12812:

Total load	Q	=	$\mathbf{Q}_1 + \mathbf{Q}_{2,b} + \mathbf{Q}_{2,p} + \mathbf{Q}_4$
Equivalent load working conditions	$Q_{2,p}$	=	0.75 kN/m ²
Equivalent load concreting	Q ₄	=	$0.10 \times Q_{2,b}$ $0.75 \text{ kN/m}^2 \le Q_4 \le 1.75 \text{ KN/m}^2$
Concrete load	Q _{2,b}	=	24.5 kN/m ³ x d [m]
Dead load	Q ₁	=	0.20 kN/m ²

**Deflection according to DIN 18202, assuming perfect levelling.

When calculating the prop load, the actual extension length may be used. The exact extension length of the slab prop when using the SKYDECK Drophead is:

clear room height minus 0.41 m. Prop loads over 33.3 kN: bolting on of Drophead for use with PEP Slab Props using 2 Bolts DIN EN ISO 4016 M12 x 40-4.6 galv., Mu.

PFR

A16 SKYDECK Prop loads with Prophead SSK

		Main Beam SLT 225								Main Beam SLT 150							
Ē		Pa	anel span	ı c 1.50	m	Pa	inel span	ıc 0.75 ı	n	Pa	anel span	n c 1.50	m	Panel span c 0.75 m			n
less d [N/m²]	Prop lo	Prop load [kN]		Deflection line**		Prop load [kN]		Deflection line**		Prop load [kN]		ction **	Prop load [kN]		Deflection line**	
Slab thickn	Load q* [kl		with Centre Support SSK		with Centre Support SSK		with Centre Support SSK		with Centre Support SSK		with Centre Support SSK		with Centre Support SSK		with Centre Support SSK		with Centre Support SSK
0.14	5.13	17.3		7		8.7		7		11.5		7	ĺ				
0.16	5.62	19.0		7		9.5		7		12.6		7					
0.18	6.11	20.6		7		10.3		7		13.7		7					
0.20	6.60	22.3		7		11.1		7		14.9		7					
0.22	7.09	23.9		7		12.0		7		16.0		7					
0.24	7.58	25.6		7		12.8		7		17.1		7	İ				
0.25	7.83	26.4		7		13.2		7		17.6		7					
0.26	8.07	27.2		7		13.6		7		18.2		7					
0.28	8.56	28.9	16.2	7	7	14.4		7		19.3		7					
0.30	9.05	30.5	17.1	7	7	15.3		7		20.4		7					
0.35	10.38	35.0	19.6	7	7	17.5		7		23.4		7					
0.40	11.73	39.6	22.2	6	7	19.8		7		26.4		7					
0.43	12.54	42.3	23.7	6	6	21.2		7		28.2		6					
0.45	13.08		24.7		6	22.1		7		29.4		6					
0.50	14.43		27.3		6	24.3		7		32.5		6					
0.55	15.77		29.8		6	26.6		7		35.5		6		17.7		7	
0.60	17.12					28.9		7					İ	19.3		7	
0.65	18.47					31.2	19.0	7	7					20.8		7	
0.70	19.82					33.4	20.4	7	7					22.3		7	
0.75	21.08					35.6	21.7	6	7					23.7		7	
0.80	22.30					37.6	23.0	6	7					25.1		7	
0.85	23.53					39.7	24.2	6	7					26.5		7	
0.90	24.75					41.8	25.5	6	7					27.8		6	
0.95	25.98						26.7		7					29.2		6	
1.00	27.20						28.0		6					30.6		6	
1.05	28.43						29.3		6					32.0		6	
1.09	29.35						30.2		6					33.0		6	

*Load according to DIN EN 12812:

Total load	Ο	=	$\mathbf{Q}_1 + \mathbf{Q}_{2,b} + \mathbf{Q}_{2,p} + \mathbf{Q}_4$
Equivalent load working conditions	Q _{2,p}	=	$0.75 \text{ kN/m}^2 \le 0.4 \le 1.75 \text{ kN/m}^2$
Equivalent load concreting	Q ₄	=	$0.10 \times Q_{2,b}$ 0.75 kN/m ² < Q < 1.75 KN/m ²
Concrete load	Q _{2,b}	=	24.5 kN/m ³ x d [m]
Dead load	Q ₁	=	0.20 kN/m ²

**Deflection according to DIN 18202, assuming perfect levelling.

When calculating the prop load, the actual extension length may be used. The exact extension length of the prop when using the SKYDECK Prophead is: clear room height minus 0.33 m.



A16 SKYDECK Prop loads in panel system Striking guide values

Panel system

Slab thickness d [m]	Load q* [kN/m²]	Prop load [kN]	* Deflection to DIN 18202, Line
0.14	5.13	5.78	7
0.16	5.62	6.33	7
0.18	6.11	6.88	7
0.20	6.61	7.43	7
0.22	7.10	7.98	7
0.24	7.59	8.53	7
0.25	7.83	8.81	7
0.26	8.08	9.09	7
0.28	8.57	9.64	7
0.30	9.06	10.19	7
0.35	10.39	11.69	7
0.40	11.74	13.21	7
0.42	12.28	13.82	6
0.45	13.09	14.73	6
0.50	14.44	16.24	6
0.55	15.79	17.76	6



* Deflection according to DIN 18202. Assuming perfect levelling.

Calculation basis:

*Load according to EN 12812

Total load	Q	=	$Q_1 + Q_{2,b} + Q_{2,p} + Q_4$
Equivalent load working conditions	Q _{2,p}	=	0.75 kN/m²
Equivalent load concreting	Q ₄	=	$0.10 \times Q_{2,b}$ $0.75 \text{ kN/m}^2 \le Q_4 \le 1.75 \text{ KN/m}^2$
Concrete load	Q _{2,b}	=	24.5 kN/m ³ x d [m]
Dead load	Q ₁	=	0.20 kN/m ²

Striking guide values* [days] for the Drophead System

Slab thickness d [m]	Required concrete strength f _{ck,cube}	*Guide values for striking time [days] for panels and main beams at an average curing temperature [°C] of						
	[N/mm ²]	5°	10°	20°				
0.14	15	10	6	5				
0.16	13	8	5	4				
0.18	11	6	4	3				
0.20	9	5	3	2				
0.22	8	4	3	2				
0.25	7	4	2	2				
0.30	6	3	2	2				
0.35	5	3	2	1				
0.40-1.09	5	2	1	1				

The required concrete strength at the time of striking is decisive. This is to be calculated using suitable methods.

Guidelines according to DIN 1045, e.g. curing, must also be taken into account. A minimum of 1.88 cm²/m (Q 188) is required for the bottom reinforcement layer. For systems without any centre support of the main beams, a live load of 1 kN/m² on the slab which was struck early, is to be considered.

* Guide values according to Leonhard for cement Z 35, CEM I 32,5 R.

A17 SKYDECK Filler plates, forming around columns

PERI

Perm. width B [m] of the filler plate

	Case 1	Case 2				
Slab	Fin Ply 21 mm	Fin Ply 21 mm				
thickness	Spruce 400	Spruce 400				
d [m]	parallel/cross	parallel/cross				
0.14	0.65	0.71				
0.16	0.62	0.69				
0.18	0.60	0.68				
0.20	0.58	0.65				
0.22	0.57	0.64				
0.24	0.55	0.63				
0.25	0.55	0.61				
0.26	0.54	0.61				
0.28	0.53	0.60				
0.30	0.52	0.59				
0.35	0.49	0.58				
0.40	0.47	0.56				
0.43	0.46	0.54				
0.45	0.46	0.53				
0.50	0.44	0.52				
0.52	0.44	0.51				
0.55	0.43	0.51				
0.60	0.42	0.50				
0.65	0.41	0.49				
0.70	0.40	0.48				
0.75	0.39	0.47				
0.80	0.39	0.46				
0.85	0.38	0.46				
0.90	0.37	0.45				
0.95	0.37	0.45				
1.00	0.36	0.44				
1.05	0.36	0.44				
1.09	0.35	0.43				

Case 1



Beam SRT-2

Case 2



Perm. width of influence $e_{\text{B}}\left[m\right]$ for shuttering columns

	Pane	el 150	Panel 75			
Slab	L/500 =	= 3 mm	L/500 =	1,5 mm		
d [m]	SRT-2	SPH	SRT-2	SPH		
0.14	1.14	0.49				
0.16	1.01	0.43				
0.18	0.90	0.38				
0.20	0.81	0.35				
0.22	0.74	0.32				
0.24	0.68	0.29				
0.25	0.65	0.28				
0.26	0.63	0.27				
0.28	0.59	0.25				
0.30	0.55	0.23				
0.35	0.47	0.20				
0.40	0.41	0.18				
0.43	0.39	0.16	1.70	0.72		
0.45	0.37	0.16	1.63	0.69		
0.50	0.33	0.14	1.48	0.63		
0.52	0.32	0.14	1.43	0.61		
0.55			1.35	0.57		
0.60			1.25	0.53		
0.65			1.16	0.49		
0.70			1.08	0.46		
0.75			1.01	0.43		
0.80			0.96	0.41		
0.85			0.91	0.38		
0.90			0.86	0.37		
0.95			0.82	0.35		
1.00			0.78	0.33		
1.05			0.75	0.32		
1.09			0.73	0.31		

Note: Deflection single span beam B/300.

Perm. span L [m] of the Edge Main Beams

Beam used	Slab thickness [m]										
	0.20	0.30	0.40	0.50	0.60	0.70	0.80	0.90	1.00	1.05	1.09
GT 24	4.61	3.93	3.45	3.12	2.86	2.66	2.51	2.26	2.06	1.97	1.91
VT 20	3.89	3.32	2.92	2.63	2.42	2.22	1.97	1.78	1.62	1.55	1.50
KH 10/16	3.79	3.23	2.84	2.56	2.35	2.10	1.86	1.68	1.53	1.46	1.42

Perm. width B [m] of the filler plate max. 0.40 m





A18 Slab Props

Permissible prop load [kN] according to the type test

	DED 20 N 260*		PEP 2	0-300	PEP 2	0-350	PEP 2	0-400	PEP 20-500		
<u>ם</u> פ	L = 1.51	N 260^ - 2.60 m	L = 1.71	– 3.00 m	L = 1.96	– 3.50 m	L = 2.21	– 4.00 m	L = 2.71	– 5.00 m	
Extensi length	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	
1.60	35.0	35.0									
1.70	35.0	35.0									
1.80	35.0	35.0	36.4	36.4							
1.90	35.0	35.0	36.4	36.4							
2.00	33.5	35.0	36.1	36.4	36.4	36.4					
2.10	31.9	35.0	33.2	36.4	36.4	36.4					
2.20	30.9	35.0	31.4	36.4	36.4	36.4					
2.30	29.8	35.0	29.9	36.4	36.4	36.4	36.4	36.4			
2.40	28.6	35.0	28.7	36.4	36.4	36.4	36.4	36.4			
2.50	27.1	32.9	27.7	36.4	36.4	36.4	36.4	36.4			
2.60	24.8	29.4	26.9	36.3	34.8	36.4	36.4	36.4			
2.70			25.7	32.7	33.4	36.4	36.4	36.4			
2.80			24.0	29.3	32.1	36.4	36.4	36.4	36.4	36.4	
2.90			22.3	26.5	31.1	36.4	36.4	36.4	36.4	36.4	
3.00			20.5	23.9	30.1	36.4	36.4	36.4	36.4	36.4	
3.10					28.3	35.7	34.6	36.4	36.4	36.4	
3.20					26.5	32.5	33.5	36.4	36.4	36.4	
3.30					24.8	29.7	32.1	36.4	36.4	36.4	
3.40					23.1	27.2	30.5	36.4	36.4	36.4	
3.50					21.3	24.8	28.7	34.9	36.4	36.4	
3.60							26.9	32.1	36.4	36.4	
3.70							25.3	29.8	36.4	36.4	
3.80							23.7	27.6	36.4	36.4	
3.90							22.3	25.5	36.4	36.4	
4.00							20.7	23.5	35.3	36.4	
4.10									33.3	36.4	
4.20									31.5	36.4	
4.30									29.8	35.0	
4.40									28.2	32.9	
4.50									26.8	30.8	
4.60									25.3	28.9	
4.70									24.1	27.2	
4.80									22.8	25.7	
4.90									21.5	24.1	
5.00									20.3	22.1	

All PEP 20 Props correspond to Class D of DIN EN 1065, i. e.the permissible prop load for all extension lengths is a minimum of 20 kN.

When using PERI Slab Tables, the permissible load for all PEP 20 Props is a minimum of 30 kN over the entire extension lengths due to the clamping in the Table Swivel Head or UNIPORTAL Head. *For the N Props, use of the inner tube at the bottom is only possible in connection with PERI Slab Tables or SKYDECK (bolted head).

A18 Slab Props PEP 20 with Base MP 50

Permissible prop load [kN] according to the type test

[1		1		1		1			
ght sion	PFP 20	N 260*	PEP 2	0-300	PEP 2	0-350	PEP 2	0-400	PEP 2	0-500
ten:	L = 1.51	– 2.60 m	L = 1.71	– 3.00 m	L = 1.96	– 3.50 m	L = 2.21	– 4.00 m	L = 2.71	– 5.00 m
verall 1 rop ex 50 cm	Outer tube	Inner tube	Outer tube	Inner tube	Outer tube	Inner tube	Outer tube	Inner tube	Outer tube	Inner tube
<u>о́ 5</u> е +	bottom									
2.10	35.3	35.3								
2.20	35.3	35.3								
2.30	35.3	35.3	35.3	35.3						
2.40	33.2	35.3	35.3	35.3						
2.50	31.0	35.3	33.8	35.3	35.3	35.3				
2.60	29.5	35.3	30.9	35.3	35.3	35.3				
2.70	27.8	35.3	28.7	35.3	35.3	35.3				
2.80	26.5	33.7	27.0	35.3	35.3	35.3	35.3	35.3		
2.90	25.6	29.8	25.6	34.7	35.3	35.3	35.3	35.3		
3.00	23.7	26.7	24.4	31.2	34.0	35.3	35.3	35.3		
3.10	21.6	23.9	23.5	28.0	31.9	35.3	35.3	35.3		
3.20			22.4	25.5	30.2	35.3	35.3	35.3		
3.30			20.7	23.2	28.8	35.3	35.3	35.3	35.3	35.3
3.40			19.3	21.2	27.6	33.2	34.7	35.3	35.3	35.3
3.50			17.5	19.2	26.2	29.8	32.9	35.3	35.3	35.3
3.60					24.6	27.8	31.3	35.3	35.3	35.3
3.70					22.9	25.3	29.9	34.3	35.3	35.3
3.80					21.3	23.5	28.2	31.8	35.3	35.3
3.90					19.8	21.9	26.5	29.1	35.3	35.3
4.00					18.3	20.1	24.8	26.9	35.3	35.3
4.10							23.2	25.3	35.3	35.3
4.20							21.8	23.5	35.3	35.3
4.30							20.4	22.1	34.6	35.3
4.40							19.1	20.6	32.7	35.3
4.50							17.8	19.2	30.7	33.2
4.60									28.4	31.2
4.70									27.2	29.1
4.80									25.7	27.6
4.90									24.3	26.0
5.00									23.1	24.6
5.10									21.9	23.3
5.20									20.8	22.1
5.30									19.7	20.9
5.40									18.5	19.4
5.50									17.6	17.7

*For the N Props, the inner tube at the bottom can only be used in connection with PERI Slab Tables or SKYDECK (bolted head).

PERI

A18 Slab Props

Permissible prop load [kN] according to the type test

	PEP 30-150		PEP 30-250		PEP 30-300		PEP 30-350		PEP 30-400		
n [n]	L = 0.96	– 1.50 m	L = 1.46 – 2.50 m		L = 1.71	– 3.00 m	L = 1.96	– 3.50 m	L = 2.21	– 4.00 m	
Extens length	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	
1.00	36.4	36.4									
1.10	36.4	36.4									
1.20	36.4	36.4									
1.30	35.9	36.4									
1.40	35.3	36.4									
1.50	34.5	36.4	42.9	42.9							
1.60			42.9	42.9							
1.70			42.9	42.9							
1.80			42.1	42.9	42.9	42.9					
1.90			39.7	42.9	42.9	42.9					
2.00			37.9	42.9	42.9	42.9	45.5	45.5			
2.10			36.4	42.9	42.9	42.9	45.5	45.5			
2.20			35.5	42.9	42.9	42.9	45.5	45.5			
2.30			34.3	41.5	42.9	42.9	45.5	45.5	41.5	41.5	
2.40			33.1	38.7	42.7	42.9	45.5	45.5	41.5	41.5	
2.50			31.0	35.9	41.1	42.9	45.5	45.5	41.5	41.5	
2.60					40.0	42.9	45.5	45.5	41.5	41.5	
2.70					38.5	42.9	45.5	45.5	41.5	41.5	
2.80					36.9	41.6	45.5	45.5	41.5	41.5	
2.90					34.2	38.3	45.0	45.5	41.5	41.5	
3.00					31.3	34.8	43.6	45.5	41.5	41.5	
3.10							41.4	44.2	41.5	41.5	
3.20							38.7	42.1	41.5	41.5	
3.30							36.1	38.7	41.5	41.5	
3.40							33.3	35.7	41.5	41.5	
3.50							30.7	32.5	41.5	41.5	
3.60									41.5	41.5	
3.70									41.3	41.5	
3.80									38.5	41.3	
3.90									35.9	38.1	
4.00									33.2	34.9	

All PEP 30 Props correspond to Class E of DIN EN 1065, i. e.the permissible prop load for all extension lengths is a minimum of 30 kN.

When using PERI Slab Tables, the permissible load for all PEP 30 Props is a minimum of 40 kN (PEP 30-150 = 35 kN) over the entire extension lengths due to the clamping in the Table Swivel Head or UNIPORTAL Head.

A18 Slab Props PEP 30 with Base MP 50

Permissible prop load [kN] according to the type test

t u	PEP 3	0-250	PEP 3	0-300	PEP 3	0-350	PEP 3	0-400
h eigl tensic (۱	L = 1.46	– 2.50 m	L = 1.71	– 3.00 m	L = 1.96	– 3.50 m	L = 2.21	– 4.00 m
Overall [m] (prop e> + 50 cm	Outer tube bottom	Inner tube bottom						
2.00	41.6	41.6						
2.10	41.6	41.6						
2.20	41.6	41.6						
2.30	38.9	41.6	41.6	41.6				
2.40	36.1	41.6	41.6	41.6				
2.50	33.9	41.6	41.6	41.6	44.1	44.1		
2.60	32.2	41.0	41.6	41.6	44.1	44.1		
2.70	30.8	38.7	41.6	41.6	44.1	44.1		
2.80	29.7	35.3	40.3	41.6	44.1	44.1	40.3	40.3
2.90	27.5	31.3	38.3	41.6	44.1	44.1	40.3	40.3
3.00	25.9	27.6	36.5	41.3	44.1	44.1	40.3	40.3
3.10			35.1	40.0	44.1	44.1	40.3	40.3
3.20			32.9	36.8	43.8	44.1	40.3	40.3
3.30			31.1	33.2	41.7	44.1	40.3	40.3
3.40			28.5	30.3	38.8	41.8	40.3	40.3
3.50			26.1	27.1	37.1	39.7	40.3	40.3
3.60					34.8	36.5	40.3	40.3
3.70					32.4	33.5	40.3	40.3
3.80					30.0	30.9	40.3	40.3
3.90					27.8	28.7	40.3	40.3
4.00					25.6	26.3	39.4	40.3
4.10							36.7	37.9
4.20							34.3	35.2
4.30							32.0	32.9
4.40							29.9	30.5
4.50							27.6	28.2

PERI

A18 Slab Props PEP Ergo B

	PEP Erg	o B-300	PEP Ergo B-350		
<u>a</u> [u	L = 1.97	– 3.00 m	L = 2.25 – 3.50 m		
Extens length	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	
2.00	30.0	30.0			
2.10	29.8	30.0			
2.20	27.0	30.0			
2.30	24.6	30.0	30.0	28.6	
2.40	23.0	30.0	28.6	28.6	
2.50	21.4	30.0	25.5	28.6	
2.60	20.3	29.5	23.1	28.3	
2.70	19.3	27.4	21.2	28.0	
2.80	18.2	24.8	19.8	27.4	
2.90	16.9	22.2	18.6	26.0	
3.00	15.6	20.2	17.5	24.4	
3.10			16.3	22.7	
3.20			15.2	20.8	
3.30			14.2	19.0	
3.40			13.2	17.4	
3.50			12.4	15.7	

Permissible prop load [kN] according to approval

Note:

PERI PEP Ergo B-300 and PEP Ergo B-350 Props meet the load-bearing capacity requirements of Prop Class B as stipulated in DIN EN 1065.

• General Building Inspectorate Approval Z-8.311-934 issued by the German Institute for Building Technology.

A18 Slab Props PEP Ergo D

Permissible prop load [kN]

	PEP Ergo D-150		Ergo D-150 PEP Ergo D-250		PEP Ergo D-300 +		
u [u	L = 0.98	– 1.50 m	L = 1.47	– 2.50 m	L = 1.79	– 3.00 m	
Extensi length	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	
1.00	30.8	30.8					
1.10	30.8	30.8					
1.20	30.8	30.8					
1.30	30.8	30.8					
1.40	28.5	30.8					
1.50	26.4	30.8	35.0	35.0			
1.60			35.0	35.0			
1.70			32.9	35.0			
1.80			30.7	35.0	35.0	35.0	
1.90			29.1	35.0	35.0	35.0	
2.00			28.1	35.0	35.0	35.0	
2.10			27.3	35.0	35.0	35.0	
2.20			26.5	34.1	35.0	35.0	
2.30			25.7	32.3	33.5	35.0	
2.40			24.3	29.4	31.5	34.0	
2.50			22.4	26.3	30.2	32.8	
2.60					28.3	31.4	
2.70					26.2	29.2	
2.80					24.2	26.9	
2.90					22.4	24.9	
3.00					20.6	22.7	

Note:

- PERI PEP Ergo D-150, PEP Ergo D-250, PEP Ergo D-350, PEP Ergo D-400 and PEP Ergo D-500 Props fulfil Prop Class D load-bearing capacity requirements of DIN EN 1065.
- In addition, Prop PEP Ergo D-250 fulfils the Prop Class B requirements as stipulated in DIN EN 1065.
- General Building Inspectorate Approval Z-8.311-934 for PERI PEP Ergo D-150, PEP Ergo D-250 and PEP Ergo D-300 +.
- General Building Inspectorate Approval Z-8.311-941 for PERI PEP Ergo D-350 +, PEP Ergo D-400 and PEP Ergo D-500.

A18 Slab Props PEP Ergo D

Permissible prop load [kN]

	PEP Ergo D-350 +		PEP Erg	PEP Ergo D-400		PEP Ergo D-500	
u [u	L = 2.08	– 3.50 m	L = 2.51	– 4.00 m	L = 3.26	– 5.00 m	
Extensi length	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	
2.10	40.0	40.0					
2.20	40.0	40.0					
2.30	40.0	40.0					
2.40	39.7	40.0					
2.50	36.9	40.0					
2.60	34.7	40.0	40.0	40.0			
2.70	32.9	40.0	40.0	40.0			
2.80	31.6	40.0	40.0	40.0			
2.90	30.3	40.0	40.0	40.0			
3.00	29.2	39.1	40.0	40.0			
3.10	27.2	35.4	37.7	40.0			
3.20	25.4	32.1	35.7	40.0			
3.30	23.7	29.4	33.9	40.0	40.0	40.0	
3.40	22.1	27.0	32.5	40.0	40.0	40.0	
3.50	20.7	24.7	31.0	39.7	40.0	40.0	
3.60			29.0	36.4	40.0	40.0	
3.70			27.0	33.3	40.0	40.0	
3.80			25.2	30.7	40.0	40.0	
3.90			23.5	28.2	40.0	40.0	
4.00			21.8	26.0	40.0	40.0	
4.10					39.3	40.0	
4.20					36.5	40.0	
4.30					34.0	39.2	
4.40					31.8	37.0	
4.50					29.9	34.6	
4.60					28.1	32.4	
4.70					26.4	30.4	
4.80					24.8	28.5	
4.90					23.4	26.8	
5.00					21.8	25.3	

Note:

- PERI PEP Ergo D-150, PEP Ergo D-250, PEP Ergo D-350, PEP Ergo D-400 and PEP Ergo D-500 Props fulfil Prop Class D load-bearing capacity requirements of DIN EN 1065.
- In addition, Prop PEP Ergo D-250 fulfils the Prop Class B requirements as stipulated in DIN EN 1065.
- General Building Inspectorate Approval Z-8.311-934 for PERI PEP Ergo D-150, PEP Ergo D-250 and PEP Ergo D-300 +
- General Building Inspectorate Approval Z-8.311-941 for PERI PEP Ergo D-350 +, PEP Ergo D-400 and PEP Ergo D-500.

A18 Slab Props PEP Ergo E

Permissible prop load [kN]

	PEP Ergo E-300 +		PEP Ergo	PEP Ergo E-350 +		PEP Ergo E-400		
n [n	L = 1.79	– 3.00 m	L = 2.08	– 3.50 m	L = 2.51	L = 2.51 – 4.00 m		
Extensi length	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom		
1.80	50.4	50.4						
1.90	50.4	50.4						
2.00	50.4	50.4						
2.10	50.4	50.4	50.4	50.4				
2.20	50.4	50.4	50.4	50.4				
2.30	50.4	50.4	50.4	50.4				
2.40	47.3	50.4	50.4	50.4				
2.50	45.6	50.4	50.4	50.4				
2.60	44.5	50.4	50.4	50.4	50.4	50.4		
2.70	43.3	50.4	48.5	50.4	50.4	50.4		
2.80	41.8	50.4	46.4	50.4	50.4	50.4		
2.90	40.3	48.0	44.5	50.4	50.4	50.4		
3.00	37.5	43.0	43.0	50.4	50.4	50.4		
3.10			41.5	50.4	50.4	50.4		
3.20			38.7	46.1	50.4	50.4		
3.30			36.0	41.9	50.4	50.4		
3.40			33.3	38.2	50.4	50.4		
3.50			30.9	34.9	48.5	50.4		
3.60					46.0	50.4		
3.70					42.7	48.4		
3.80					39.7	44.7		
3.90					36.9	41.1		
4.00					34.1	37.7		

Note:

- PERI Props PEP Ergo E-300 +, PEP Ergo D-350 + and PEP Ergo E-400 fulfil the Prop Class E load-bearing capacity requirements of DIN EN 1065.
- General Building Inspectorate Approval Z-8.311-941 of the German Institute for Building Technlogy.

PFRI

A18 Slab Props MULTIPROP 250, 350, 480, 625

Permissible prop load [kN] according to the type test

	MP L = 1.45	250 – 2.50 m	MP L = 1.95	350 – 3.50 m	MP L = 2.60	480 – 4.80 m	MP L = 4.30	625 – 6.25 m
Extension	Outer tube	Inner tube						
length [m]	bottom	bottom	bottom	bottom	bottom	bottom	bottom	bottom
1.45	75.5	78.5						
1.50	75.5	78.5						
1.60	75.5	78.5						
1.70	75.5	78.5						
1.80	73.8	78.5						
1.90	70.6	78.5						
1.95	68.0	78.5	91.0	90.1				
2.00	67.3	78.5	91.0	90.1				
2.10	65.7	76.8	86.0	90.1				
2.20	64.1	75.1	80.6	90.1				
2.30	62.5	72.6	75.1	89.8				
2.40	60.8	69.1	70.7	87.9				
2.50	59.2	65.6	66.4	86.1				
2.60			63.7	83.1	88.5	73.6		
2.70			61.1	80.1	83.7	73.3		
2.80			59.2	77.1	78.8	72.9		
2.90			57.4	74.1	74.0	72.6		
3.00			56.0	70.3	69.1	72.2		
3.10			54.5	66.6	64.9	71.4		
3.20			52.9	61.8	60.7	70.7		
3.30			51.3	57.1	56.5	70.0		
3.40			47.7	51.7	54.1	68.2		
3.50			44.2	46.4	51.8	66.5		
3.60					49.4	64.7		
3.70					47.5	60.4		
3.80					45.7	56.1		
3.90					43.8	51.8		
4.00					41.8	48.4		
4.10					39.7	45.0		
4.20					37.7	41.6	57.0	
4.30					35.8	39.3	57.9	45.7
4.40					33.9	37.0	56.3	45.7
4.50					32.0	34.8	54.7	45.7
4.60					30.2	32.5	52.5	45.1
4.70					28.3	30.2	50.3	44.4
4.80					26.4	27.9	47.9	43.5
4.90							45.2	42.4
5.00							42.5	41.3
5.10		_					39.9	39.9
5.20		Props are cl	assified acco	rding to offic	ial approval a	s follows:	37.2	38.5
5.30	MP 250 Clas	s T 25		MP 480 Class	D 45		34.9	37.1
5.40	MP 350 Clas	s R 35		MP 625 Class	D 60		32.8	35.6
5.50	Note:						30.8	34.1
5.60	To release th	e loads > 60 k	N, we recom	mend using the	e HD Wingnut	Spanner,	29.3	32.0
5.70	Item no. 022	027.		0 -	0		27.8	31.2
5.80	When usina	PERI Slab Tab	les, the permis	ssible load of t	he MULTIPRC	P MP 350	20.4	29.0
5.90	Prop is a mir	imum of 56 kl	N and a minim	um of 36 kN f	or the MP 480	over the	20.1	27.9
6.00	entire extens	sion lenath wh	ich is due to th	ne clamping in	the Table Swi	vel Head or	23.8	26.2
0.10	UNIPORTAI	Head.					22./	24.8
0.20							21.0	23.4
0.25							∠1.0	22./

A18 Slab Props MULTIPROP 250, 350, 480, 625 with Base MP 50



Permissible prop load [kN]

Overall height	MP 250 L = 1.95	+ MP 50 - 3.00 m	MP 350 L = 2.45	+ MP 50 - 4.00 m	MP 480 L = 3.10	+ MP 50 – 5.30 m	MP 625 L = 4.80	+ MP 50 - 6.75 m
(prop extension + 50 cm)	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom	Outer tube bottom	Inner tube bottom
2.25	76.6	73.6						
2.30	74.5	72.9						
2.40	72.4	72.1						
2.50	66.1	69.8	87.6	84.2				
2.60	63.3	67.7	83.8	82.9				
2.70	60.5	65.6	79.9	81.7				
2.80	57.7	63.1	76.1	80.5				
2.90	55.1	60.1	70.0	77.0				
3.00	52.4	57.1	63.9	73.5				
3.10	-	-	60.8	70.6	76.8	73.3		
3.20			57.6	67.6	74.4	72.8		
3.30			55.2	64.7	71.9	72.3		
3.40			52.7	61.8	69.4	71.8		
3.50			50.8	59.1	67.0	71.3		
3.60			48.8	56.4	62.6	70.0		
3.70			46.9	52.2	58.2	68.7		
3.80			45.0	48.0	53.9	67.4		
3.90			41.8	43.9	51.2	62.9		
4.00			38.5	39.8	48.6	58.4		
4 10					45.9	53.9		
4.20					43.9	50.1		
4.30					41.9	46.3		
4.40					39.8	42.5		
4.50					37.7	40.0		
4.60					35.5	37.5		
4.70					33.3	35.0		
4.80					31.7	33.2	48.7	44.5
4.90					30.0	31.4	47.5	44.4
5.00					28.4	29.6	46.2	44.3
5.10					26.7	27.8	44.5	43.1
5.20					25.1	26.0	42.8	41.8
5.30					23.4	24.2	41.1	40.4
5.40							40.1	39.6
5.50							37.3	37.2
5.60							35.3	35.6
5.70							33.3	34.0
5.80							31.5	32.5
5.90							30.6	31.7
6.00							28.1	29.5
6.10	Note:						26.7	28.1
6.20	lo release t	he loads > 60	kN, we recon	nmend using			25.3	26.7
6.30	the HD Win	gnut Spanner,	Item no. 022	027.			24.1	25.4
6.40							23.5	24.8
6.50							21.8	22.9
6.60							20.8	21.7
6.70							19.8	20.6
6.75							19.3	20.0

PERI









		Edge Beams SRT-2
061045	5.740	Edge Beam SRT-2 150
061046	2.720	Edge Beam SRT-2 75
		For longitudinal and transverse filling, for shutte-
		ring around columns. Panel with 21 mm plywood.





ltem no.	Weight kg	
061210	6.180	Drophe

Drophead SFK With self-locking coupling. Supports main beam as well as cover strip and formlining. Lowering height 6 cm. For 21 mm plywood formlining.





061200 3.860

Prophead SSK

With self-locking coupling. Supports main beams, panels, edge girders and filler timber.





061180 5

5.340 Combihead SCK

With self-locking coupling. Supports main beams, panels, edge girders and filler timber.





5







Item no. Weight kg		
061023 2.140	End Support SSL To be used as compensation to the filler area and to be fixed to the drophead SFK.	
061290 0.133	Panel Clip SPK Fixes panel on main beam.	
061280 0.778	Panel Wedge Clip SPKK Fixes panel on main beam.	
061052 2.590	Table Connector STV For assembling SKYDECK Slab Tables. Also allows the fixing of intermediate props at the main beam	
061300 2.240	Erection Aid SSH For forming with SKYDECK. Adjustable in 7.5-cm-increments.	
		2325 - 3750
	JE-	

SKYDE	CK Pa	nel Slab Formwork		PERI
Item no. V	Veight kg			
061310	0.996	Tension Sleeve SAO For bracing cantilevered main beams.	Technical Data Permissible tension force 3.0 kN.	
123633	12.100	Tension Unit SD		
			e	8
			, 3855 C	

061060	108.000	Platform SDB 150 Work and safety scaffold. Scaffold width 1.30 m. With continuous 39 mm thick decking and foldable handrail frame.	Technical Data Permissible load 150 kg/m².	
				906





061061 153.000 Platform SDB 225 Technical Data Work and safety scaffold. Scaffold width 1.30 m. With continuous 39 mm thick decking and foldable handrail frame. Permissible load 150 kg/m².







Item no. Weight kg 061062 185.000

Platform SDB 300

Work and safety scaffold. Scaffold width 1.30 m. With continuous 39 mm thick decking and foldable handrail frame.





Technical Data

Permissible load 150 kg/m².

061250 4.760 Guardrail Holder SGH, Alu

For assembling a guardrail with SKYDECK.



Technical Data Maximum width of influence 1.55 m.







SKYDECK Pa	anel Slab Formwork	PERI
Item no. Weight k 065073 1.370	g Anchor Chain 3.0 kN, l = 2.5 m	Technical Data Permissible tension force 3.0 kN.
	Creating at the second	
065074 0.450	Turnbuckle 3.0 kN, M12	Technical Data Permissible tension force 3.0 kN.
	CALENT	min 220 max 300
028100 1.830	Base Plate for RS For assembly of RS Push-Pull Props.	Complete with 1 pc. 018050 Pin Ø 16 x 65/86, galv. 1 pc. 018060 Cotter Pin 4/1, galv.
117343 3.250	Base Plate-2 for RS 210 - 1400, galv. For assembly of Push-Pull Props RS 210, 260, 300, 450, 650, 1000 and 1400.	Complete with 2 pc. 105400 Pin Ø 20 x 140, galv. 2 pc. 018060 Cotter Pin 4/1, galv.
124777 0.210	Accessories Anchor Bolt PERI 14/20 x 130	
124777 0.210	Anchor Bolt PERI 14/20 x 130 For temporary fixation to reinforced concrete structures.	Note See PERI data sheet! Drilling Ø 14 mm.
		Ø14 130 SW 24



ltem no.	Weight kg		
123970	0.047	Screw-On Sleeve PERI M16/164	Note
		For temporary mounting of components on rein- forced concrete slabs.	Inserted into the fresh concrete immediately after concreting.





Accessories			
0 Bolt ISO 4014 M16 x 130-8.8,	0.240	123973	

061530	82.400	Pallet SD 150 x 225, galv.
		For stacking and transportation of 48 SKYDECK
		Panels 150 x 75.

Complete with

5 pc. 710594 Belt Spanner Unit L = 1400 mm 3 pc. 710595 Belt Lose End L = 4200 mm 2 pc. 710596 Belt Lose End L = 5000 mm **Note** Follow Instructions for Use!

Technical Data

Permissible load-bearing capacity 750 kg.





P	E	R	

ltem no.	Weight kg
061500	76.700

Pallet SD 150 x 75, galv.

For stacking and transportation of 14 SKYDECK Panels 150 x 75.

Note

Follow Instructions for Use! **Technical Data** Permissible load-bearing capacity 1.0 t.





Note Follow Instructions for Use! Technical Data Forklift arm length 1800 mm, forklift arm width 550 mm, stroke range 115 mm. Permissible load-bearing capacity 2.0 t.



061520 403.000

Transportation Fork SUG, galv. For moving SKYDECK Slab Tables.



Note Follow Instructions for Use! Technical Data

Permissible load-bearing capacity 1.0 t.



PERI

Item no. Weight kg 035500 72.800

Stripping Cart, Alu

Mobile working scaffold. Height-adjustable in 25-cm-increments. Platform height max. 2.00 m.



Follow Instructions for Use! **Technical Data**

Permissible load 100 kg/m².







Item no. Weight kg 102031 363.000

Stripping Cart ASW 465, compl.

Mobile working scaffold. Height-adjustable in 30-cm-increments. Platform height max. 4.65 m.

Packed in:

Ring Pallet USP 104 Item no. 100678, with Lashing Strap 25 x 5750 Item no. 100707 (x 1) and Scaffold Tube Steel L = 1000 Item no. 100706 (x 6).

Complete with

1 pc. 102025 Folding Base Unit 160/190 ASW 6 pc. 102035 Vertical Frame 70/90 ASW 6 pc. 102034 Vertical Frame 70/120 ASW 2 pc. 102026 Entry Platform 190 ASW 1 pc. 102030 Toe-Board Set 70/190 ASW 4 pc. 102027 Double Guardrail 190 ASW 3 pc. 102028 Diagonal Brace 210 ASW 2 pc. 102029 Horizontal Brace 190 ASW 12 pc. 102807 Ballast 10 kg ASW 2 pc. 103040 Lateral complete ASW 1 pc. 102587 Center part ASW galv.

)FD

Note

Follow Instructions for Use!

Technical Data

Permissible load 100 kg/m².







Item no. Weight kg

Handrail Units SD		
Handrail Unit SD	13.500	118331
Handrail Unit SD	18.000	118323
For assembling a G		

Handrail Unit SD 75 Handrail Unit SD 150 For assembling a Guardrail on a casting segment with SKYDECK. Assembling in a rectangular angle on top of the Main Beams.





126630 123.000

Pallet Handrail Unit SD 75 For stacking and transportation of 10 SKYDECK Handrail Units SD 75.

Note

Follow Instructions for Use! **Technical Data** Permissible load-bearing capacity 150 kg.



Item no. Weight kg 126580 134.000

Pallet Handrail Unit SD 150

For stacking and transportation of 10 SKYDECK Handrail Units SD 150.



Follow Instructions for Use! Technical Data

Permissible load-bearing capacity 200 kg.



118622 4.870 Transition Prophead SDSK

For the rectangular change of the direction of the Main Beam SLT in the standard application with Prophead SSK.





127620 6.790 **Transition Head SDFK** For the rectangular change of the direction of the Main Beam SLT in the standard application with Drophead SFK.









 Item no.
 Weight kg

 114755
 555.000
 Li

00 Lifting Plattform 290

For shuttering and striking of SKYDECK Panels.

Complete with

1 pc. 129377 Panel Holder SD, right 2 pc. 129378 Panel Holder SD, left **Note**

Follow Instruction for Use!

Technical Data

Platform height max. 2.90 m; working height max. 4.90 m. Required tension force for the charging process 110/220 V, 50/60 Hz. Permissible load-bearing capacity 180 kg.







PERI

The optimal System for every Project and every Requirement



Wall Formwork



Column Formwork



Slab Formwork



Climbing Systems



Bridge Formwork



Tunnel Formwork



Shoring Systems



Construction Scaffold



Facade Scaffold



Industrial Scaffold





Protection Scaffold



Safety Systems



System-Independent Accessories



Services



PERI Formwork Systems Inc. 45 Nixon Road Bolton, ON L7E 1K1 Canada Tel. +1 (905) 951 - 5400 Fax + 1 (905) 951 - 5454 info@peri.ca www.peri.ca www.peri.ca